

The Samsung logo is located in the top left corner of the page. It consists of the word "SAMSUNG" in a bold, white, sans-serif font, enclosed within a white oval shape. The background of the entire page is a solid blue color with a subtle, abstract pattern of concentric, wavy lines that create a sense of depth and movement.

# User Manual

## TL350

This user manual includes detailed usage instructions for your camera. Please read this manual thoroughly.

 [Click a topic](#)

Common questions

Quick reference

Contents

Basic functions

Extended functions

Shooting options

Playback/Editing

Appendixes

Index

# Health and safety information

Always comply with the following precautions and usage tips to avoid dangerous situations and ensure peak performance of your camera.



**Warning**—situations that could cause injury to yourself or others



**Caution**—situations that could cause damage to your camera or other equipment



**Note**—notes, usage tips, or additional information



## Safety warnings

### Do not use your camera near flammable or explosive gases and liquids

Do not use your camera near fuels, combustibles, or flammable chemicals. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the camera or its accessories.

### Keep your camera away from small children and pets

Keep your camera and all accessories out of the reach of small children and animals. Small parts may cause choking or serious injury if swallowed. Moving parts and accessories may present physical dangers as well.

### Prevent damage to subjects' eyesight

Do not use the flash in close proximity (closer than 1 m/3 ft) to people or animals. Using the flash too close to your subject's eyes can cause temporary or permanent damage.

### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers. Incompatible batteries and chargers can cause serious injuries or damage to your camera.
- Never dispose of batteries in a fire. Follow all local regulations when disposing of used batteries.
- Never place batteries or cameras on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Do not use a damaged power supply cord, plug, or loose outlet when charging batteries. This may cause a fire or electric shock.



CAUTION

### **Safety precautions**

#### **Handle and store your camera carefully and sensibly**

- Do not allow your camera to get wet—liquids can cause serious damage. Do not handle your camera with wet hands. Water damage to your camera can void your manufacturer's warranty.
- Do not expose the camera to direct sunlight or high temperatures for an extended period of time. Prolonged exposure to sunlight or extreme temperatures can cause permanent damage to your camera's internal components.
- Avoid using or storing your camera in dusty, dirty, humid, or poorly-ventilated areas to prevent damage to moving parts and internal components.
- Remove the batteries from your camera when storing it for an extended period of time. Installed batteries may leak or corrode over time and cause serious damage to your camera.
- Protect your camera from sand and dirt when using it on beaches or in other similar areas.
- Protect your camera from impact, rough handling, and excessive vibration to avoid serious damage.
- Exercise caution when connecting cables or adapters and installing batteries and memory cards. Forcing the connectors, improperly connecting cables, or improperly installing batteries and memory cards can damage ports, connectors, and accessories.
- Do not insert foreign objects into any of your camera's compartments, slots, or access points. Damage due to improper use may not be covered by your warranty.
- Do not swing your camera by the strap. This may cause injury to yourself or others.
- Do not paint your camera, as paint can clog moving parts and prevent proper operation.
- Paint or metal on the outside of the camera may cause allergies, itchy skin, eczema, or swelling for people with sensitive skin. If you have experience any of these symptoms, stop using the camera immediately and consult a doctor.

### **Protect batteries, chargers, and memory cards from damage**

- Avoid exposing batteries or memory cards to very cold or very hot temperatures (below 0° C/32° F or above 40° C/104° F). Extreme temperatures can reduce the charging capacity of your batteries and can cause memory cards to malfunction.
- Prevent batteries from making contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage. Also, this may cause a fire or electric shock.
- Prevent memory cards from making contact with liquids, dirt, or foreign substances. If dirty, wipe the memory card clean with a soft cloth before inserting in your camera.
- Do not allow liquids, dirt, or foreign substances to come in contact with the memory card slot. Doing so may cause the camera to malfunction.
- Insert a memory card in the correct direction. Inserting a memory card in the wrong direction may damage your camera and memory card.
- Turn off the camera when inserting or removing the memory card.
- Do not bend, drop, or subject memory cards to heavy impact or pressure.

- Do not use memory cards that have been formatted by other cameras or by a computer. Reformat the memory card with your camera.
- Never use a damaged charger, battery, or memory card.

### **Use only Samsung-approved accessories**

Using incompatible accessories may damage your camera, cause injury, or void your warranty.

### **Protect your camera's lens**

- Do not expose the lens to direct sunlight, as this may discolor the image sensor or cause it to malfunction.
- Protect your lens from fingerprints and scratches. Clean your lens with a soft, clean, debris-free lens cloth.



### Important usage information

#### **Allow only qualified personnel to service your camera**

Do not allow unqualified personnel to service the camera or attempt to service the camera yourself. Any damage that results from unqualified service is not covered by your warranty.

#### **Ensure maximum battery and charger life**

- Overcharging batteries may shorten battery life. After charging is finished, disconnect the cable from your camera.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

#### **Exercise caution when using the camera in humid environments**

When transferring the camera from a cold environment to a warm and humid one, condensation can form on the delicate electronic circuitry and memory card. In this situation, wait for at least 1 hour until all moisture has evaporated before using the camera.

#### **Check that the camera is operating properly before use**

The manufacturer takes no responsibility for any loss of files or damage that may result from camera malfunction or improper use.

## Copyright information

- Microsoft Windows and the Windows logo are registered trademarks of the Microsoft Corporation.
- Mac is a registered trademark of the Apple Corporation.
- HDMI, the HDMI logo and the term "High Definition Multimedia Interface" are trademarks or registered trademarks of HDMI Licensing LLC.

- Camera specifications or contents of this manual may be changed without prior notice due to upgrade of camera functions.
- For Open Source License information, refer to the "OpenSourceInfo.pdf" in the provided CD-ROM.

## Organization of the user manual

### Basic functions 13

Learn about your camera's layout, icons, and basic functions for shooting.

### Extended functions 34

Learn how to take a photo by selecting a mode and how to record a video or voice memo.

### Shooting options 51

Learn about the options you can set in Shooting mode.




### Playback/Editing 79

Learn how to play back photos, videos, or voice memos and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, TV, or HDTV.

### Appendixes 108

Refer to settings, error messages, specifications, and maintenance tips.

## Indications used in this manual

Shooting mode	Indication
Smart Auto	
Program	<b>P</b>
Aperture Priority	<b>A</b>
Shutter Priority	<b>S</b>
Manual	<b>M</b>
DUAL IS	
Scene	<b>SCN</b>
Movie	

### Shooting mode icons

These icons indicate that a function is available in the corresponding modes. The **SCN** mode may not support functions for all scenes.

For example:

#### Adjusting the exposure manually (EV)

**P A S**  

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.









Darkier (-)

Neutral (0)

Brighter (+)

Available in the Program, Aperture Priority, Shutter Priority, DUAL IS, and Movie modes

## Icons used in this manual

Icon	Function
	Additional information
	Safety warnings and precautions
[ ]	Camera buttons. For example, [Shutter] represents the shutter button.
( )	Page number of related information
→	The order of options or menus you must select to perform a step; for example: Select  → <b>White Balance</b> (represents select  , and then <b>White Balance</b> ).
*	Annotation


## Abbreviations used in this manual

Abbreviation	Definition
AF	Auto Focus
DIS	Digital Image Stabilization
DPOF	Digital Print Order Format
EV	Exposure Value
OIS	Optical Image Stabilization
WB	White Balance

## Expressions used in this manual


### Pressing the shutter

- Half-press [**Shutter**]: press the shutter halfway down
- Press [**Shutter**]: press the shutter all the way down

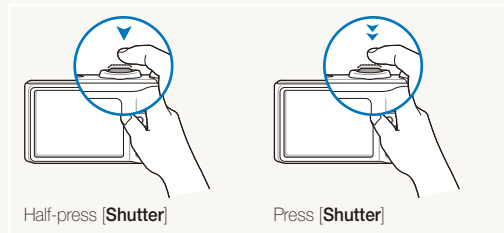


### Exposure (Brightness)

The amount of light that enters your camera determines the exposure. You can alter the exposure with shutter speed, aperture value, and ISO speed. By altering the exposure, your photos will be darker or lighter.

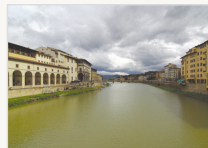


Normal exposure

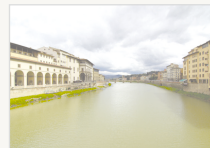

Overexposure (too bright)





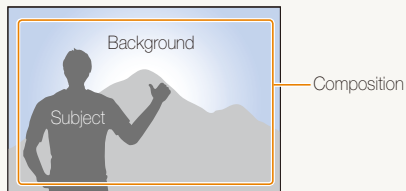








### Subject, background, and composition

- **Subject**: the main object of a scene, such as a person, animal, or still life
- **Background**: the objects around the subject
- **Composition**: the combination of a subject and background



# Common questions

You can get answers to common questions. Solve problems easily by setting shooting options.

	<b>The subject's eyes appear red.</b>	<p>This is caused by a reflection from the camera flash.</p> <ul style="list-style-type: none"><li>Set the flash option to  <b>Red-eye</b> or  <b>Red-eye Fix</b>. (p. 59)</li><li>If the photo has already been taken, select  <b>Red-eye Fix</b> in the edit menu. (p. 93)</li></ul>
	<b>Photos have dust spots.</b>	<p>Dust particles floating in the air may be captured in photos when using the flash.</p> <ul style="list-style-type: none"><li>Turn off the flash or avoid taking photos in a dusty place.</li><li>Set ISO speed options. (p. 61)</li></ul>
	<b>Photos are blurred.</b>	<p>This may be caused by taking photos in low light conditions or holding the camera incorrectly.</p> <ul style="list-style-type: none"><li>Press <b>[Shutter]</b> halfway down to make sure the subject is focused. (p. 32)</li><li>Use the  <b>DUAL</b> mode. (p. 45)</li></ul>
	<b>Photos are blurred when shooting at night.</b>	<p>As the camera tries to let in more light, the shutter speed slows. This can make it difficult to steady the camera and may result in camera shake.</p> <ul style="list-style-type: none"><li>Select  <b>Night</b> in the <b>SCN</b> mode. (p. 37)</li><li>Turn on the flash. (p. 59)</li><li>Set ISO speed options. (p. 61)</li><li>Use a tripod to prevent your camera from shaking.</li></ul>
	<b>Subjects come out too dark because of backlighting.</b>	<p>When the light source is behind the subject or when there is a high contrast between the light and dark areas, the subject may come out shaded.</p> <ul style="list-style-type: none"><li>Avoid shooting in front of the sun.</li><li>Select  <b>Backlight</b> in the <b>SCN</b> mode. (p. 37)</li><li>Set the flash option to  <b>Fill in</b>. (p. 59)</li><li>Adjust the exposure. (p. 71)</li><li>Set the metering option to  <b>Spot</b> if a bright subject is in the center of the frame. (p. 71)</li></ul>

# Quick reference



## Taking photos of people

- **SCN** mode > Beauty Shot, Portrait, Children ▶ 37
- Red-eye, Red-eye Fix (to prevent or correct red-eye) ▶ 59
- Face Detection ▶ 66



## Taking photos at night or in the dark

- **SCN** mode > Night, Dawn, Fireworks ▶ 37
- Flash options ▶ 59
- ISO speed (to adjust the sensitivity to light) ▶ 61



## Taking action photos

- **S** mode ▶ 43
- High-speed burst mode ▶ 55
- Precapture ▶ 56



## Taking photos of scenery

- **SCN** mode > Panorama, Landscape ▶ 37



## Taking photos of text, insects, or flowers

- **SCN** mode > Close Up, Text ▶ 37
- Macro, Auto Macro, Manual Focus (to take close-up photos) ▶ 62
- White Balance (to change the color tone) ▶ 72



## Adjusting the exposure (brightness)

- WB BKT (to take 3 photos of the same scene with different white balance options) ▶ 58
- AE BKT (to take 3 photos of the same scene with different exposures) ▶ 58
- ISO speed (to adjust the sensitivity to light) ▶ 61
- EV (to adjust exposure) ▶ 71
- Metering ▶ 71



## Applying a different effect

- PSS BKT (to take 9 photos of the same scene with different photo styles) ▶ 58
- Photo styles (to apply tones) ▶ 75
- Smart filter effects ▶ 76
- Image adjustment (to adjust saturation, sharpness, or contrast) ▶ 77



## Reducing camera shake

- Optical Image Stabilization (OIS) ▶ 30
- **DUAL** mode ▶ 45

- Viewing files by category in Smart Album ▶ 82
- Deleting all files on the memory card ▶ 85
- Viewing files as a slide show ▶ 86
- Viewing files on a TV or HDTV ▶ 95
- Connecting your camera to a computer ▶ 97
- Adjusting sound and volume ▶ 110
- Adjusting the brightness of the display ▶ 110
- Formatting the memory card ▶ 111
- Changing the display language ▶ 111
- Setting the date and time ▶ 112
- Troubleshooting ▶ 121

# Contents

---

Basic functions .....	13
Unpacking .....	14
Camera layout .....	15
Inserting the battery and memory card .....	18
Charging the battery and turning your camera on .....	19
Charging the battery .....	19
Turning on your camera .....	19
Mini dashboard .....	20
Performing the initial setup .....	21
Learning icons .....	23
Selecting options .....	24
Setting the display and sound .....	26
Changing the information displayed .....	26
Setting the sound .....	27
Taking photos .....	28
Zooming .....	29
Reducing camera shake (OIS) .....	30
Using the drive mode dial .....	31
Tips for getting a clearer photo .....	32

Extended functions .....	34
Using the Smart Auto mode .....	35
Using the Scene mode .....	37
Using the Panorama mode .....	37
Using the Panorama Action mode .....	39
Using the Beauty Shot mode .....	40
Using the Program mode .....	41
Using the Aperture Priority, Shutter Priority, or Manual mode .....	42
Using the Aperture Priority mode .....	43
Using the Shutter Priority mode .....	43
Using the Manual mode .....	44
Using the DUAL IS mode .....	45
Recording a video .....	46
Recording high-speed videos .....	48
Using the Smart Scene Detection mode .....	49
Recording voice memos .....	50
Recording a voice memo .....	50
Adding a voice memo to a photo .....	50

<b>Shooting options</b> .....	51	<b>Using face detection</b> .....	66
<b>Selecting a resolution and quality</b> .....	52	Detecting faces .....	66
Selecting a resolution .....	52	Taking a self-portrait shot .....	67
Selecting image quality .....	53	Taking a smile shot .....	67
<b>Using the timer</b> .....	54	Detecting eye blinking .....	68
<b>Using burst modes</b> .....	55	Using smart face recognition .....	68
Taking photos in the High-speed burst mode .....	55	Registering faces as your favorites (My Star) .....	69
Taking photos in the Precapture mode .....	56	<b>Adjusting brightness and color</b> .....	71
Taking photos in the Interval mode .....	57	Adjusting the exposure manually (EV) .....	71
Taking bracketed photos .....	58	Changing the metering option .....	71
<b>Shooting in the dark</b> .....	59	Selecting a light source (White balance) .....	72
Preventing red-eye .....	59	<b>Improving your photos</b> .....	75
Using the flash .....	59	Applying photo styles .....	75
Adjusting the ISO speed .....	61	Applying smart filter effects .....	76
<b>Changing the camera's focus</b> .....	62	Adjusting your photos .....	77
Using macro .....	62	<b>Using smart range</b> .....	78
Using auto focus .....	62		
Using selection focus .....	63		
Using tracking auto focus .....	64		
Adjusting the focus area .....	65		

<b>Playback/Editing</b> .....	79
<b>Playing back</b> .....	80
Starting Playback mode .....	80
Viewing photos .....	85
Playing a video .....	86
Playing voice memos .....	88
<b>Editing a photo</b> .....	90
Resizing photos .....	90
Rotating a photo .....	90
Applying photo styles .....	91
Applying smart filter effects .....	92
Correcting exposure problems .....	93
Creating a print order (DPOF) .....	94
<b>Viewing files on a TV or HDTV</b> .....	95
<b>Transferring files to your computer (for Windows)</b> .....	97
Transferring files using Intelli-studio .....	98
Transferring files by connecting the camera as a removable disk .....	100
Disconnecting the camera (for Windows XP) .....	101
<b>Transferring files to your computer (for Mac)</b> .....	102

<b>Using Samsung RAW Converter</b> .....	103
Installing Samsung RAW Converter .....	103
Opening Samsung RAW Converter .....	103
Using the Samsung RAW Converter Interface .....	104
Editing RAW format files .....	105
Saving RAW files as JPEG/TIFF formats .....	106
<b>Printing photos with a photo printer (PictBridge)</b> .....	107

<b>Appendixes</b> .....	108
<b>Camera settings menu</b> .....	109
Accessing the settings menu .....	109
Sound .....	110
Display .....	110
Settings .....	111
<b>Error messages</b> .....	114
<b>Camera maintenance</b> .....	115
Cleaning your camera .....	115
About memory cards .....	116
About the battery .....	117
<b>Before contacting a service center</b> .....	121
<b>Camera specifications</b> .....	124
<b>FCC notice</b> .....	128
<b>Index</b> .....	129

 
# Basic functions

Learn about your camera's layout, icons, and basic functions for shooting.

Unpacking .....	14
Camera layout .....	15
Inserting the battery and memory card .....	18
Charging the battery and turning your camera on ...	19
Charging the battery .....	19
Turning on your camera .....	19
Mini dashboard .....	20
Performing the initial setup .....	21
Learning icons .....	23
Selecting options .....	24
Setting the display and sound .....	26
Changing the information displayed .....	26
Setting the sound .....	27
Taking photos .....	28
Zooming .....	29
Reducing camera shake (OIS) .....	30
Using the drive mode dial .....	31
Tips for getting a clearer photo .....	32

# Unpacking


Check your product box for the following items.



Camera



 
AC adapter/USB cable  
(AD44-00143A)/(AD39-00165A)




Rechargeable battery  
(4302-001226)



 Strap  
(Black: AD63-02604A/  
Silver: AD63-02596A)



 Software CD-ROM  
(User manual included)  
(AD46-00337A)




Quick Start Manual  
(AD68-04844A)


## Optional accessories



 
Memory cards



A/V cable  
(AD39-00146A)

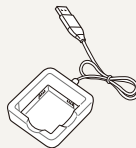

Battery charger  
(AD44-00164A)

 


HDMI cable  
(AD39-00179A)




The illustrations may differ from your actual items.

# Camera layout

Before you start, familiarize yourself with your camera's parts and their functions.

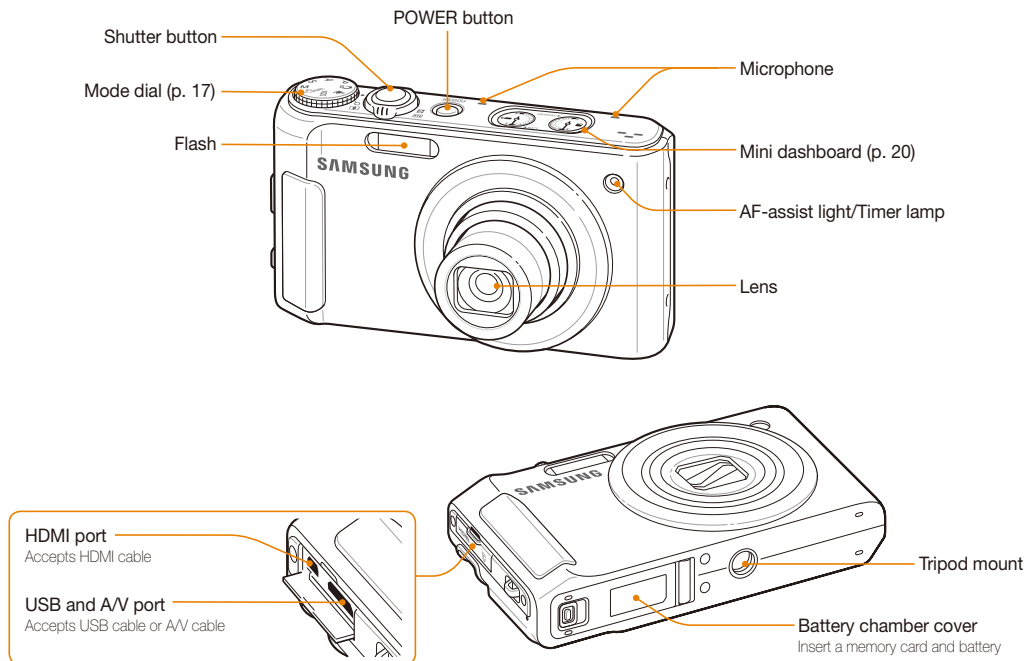

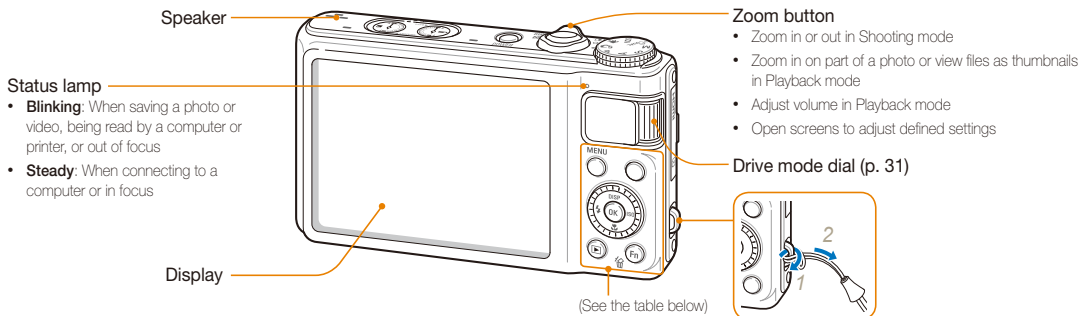




Button	Description	
<b>MENU</b>	Access options or menus.	
<b>Recorder</b>	Start recording a video.	
<b>Navigation</b>	<b>When pressing:</b>	
	<b>DISP</b>	In Shooting mode: Change the display option While setting: Move up
	<b>Macro</b>	Change the macro option: Move down
	<b>Flash</b>	Change the flash option: Move left
	<b>ISO</b>	Change the ISO option: Move right
<b>Navigation</b>	<b>When rotating:</b>	
	• Scroll to an option or menu.	
	• Adjust shutter speed, aperture, or exposure value in Shooting mode.	
	• Scroll through files in Playback mode.	


Button	Description	
<b>OK</b>	Confirm the highlighted option or menu.	
<b>Playback</b>	Enter Playback mode.	
<b>Function</b>	<ul style="list-style-type: none"> <li>• Access options in Shooting mode.</li> <li>• Delete files in Playback mode.</li> </ul>	

## Mode dial


Icon	Mode	Description
	Smart Auto	Take a photo by letting the camera select a scene mode it detects.
<b>P</b>	Program	Take a photo by setting options.
<b>A</b>	Aperture Priority	Take a photo by adjusting the aperture value. (The shutter speed is set automatically.)
<b>S</b>	Shutter Priority	Take a photo by adjusting the shutter speed. (The aperture value is set automatically.)
<b>M</b>	Manual	Take a photo by adjusting both the aperture value and shutter speed.
 DUAL IS	DUAL IS	Take a photo using options suitable for reducing camera shake.
<b>SCN</b>	Scene	Take a photo using options preset for a specific scene.
	Movie	Check the configured settings to record a video.

# Inserting the battery and memory card



Learn how to insert the battery and an optional memory card into the camera.

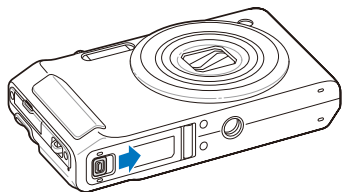


Insert a memory card with the gold-colored contacts facing up.

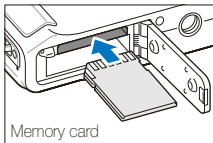


Insert the battery with the Samsung logo facing down.

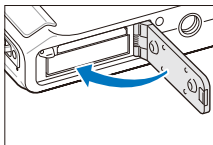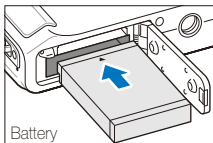

## Removing the battery and memory card

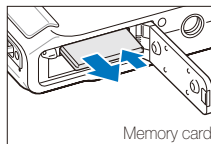

Push gently the card until the card disengages from the camera, and then pull it out of the slot.

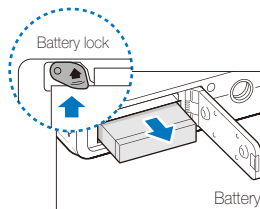

Push the lock up to release the battery.




The internal memory can be used as a temporary storage device when the memory card is not inserted.

# Charging the battery and turning your camera on

## Charging the battery

Before using the camera for the first time, you must charge the battery. Attach the USB cable to the AC adapter, and then plug the end of cable with the indicator light into your camera.

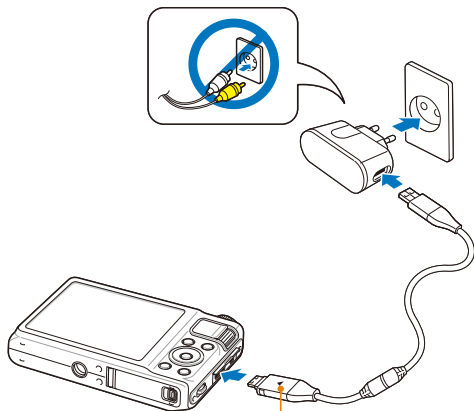


Indicator light

- **Red:** Charging
- **Green:** Fully charged

## Turning on your camera


Press **[POWER]** to turn your camera on or off.

- The initial setup screen appears when you turn on the camera for the first time. (p. 21)

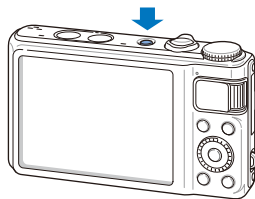

### Turning on your camera in Playback mode


Press **[▶]**. The camera turns on and accesses Playback mode immediately.

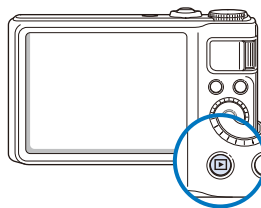

When you turn on your camera by pressing and holding **[▶]** for about 5 seconds, the camera does not emit any camera sounds.

## Mini dashboard

 While the camera is turned on, Mini dashboard shows you the remaining capacity of the battery and memory card.




- When exposing the camera to a hot and humid environment, condensation can form on the gauges.
- If the hand of a gauge keeps spinning around, contact a service center.
- The remaining capacity of the battery and memory card may appear different from the gauge.

# Performing the initial setup

When the initial setup screen appears, follow the steps below to configure the camera's basic settings.

## 1 Press **[POWER]**.

- The initial setup screen appears when you turn on the camera for the first time.

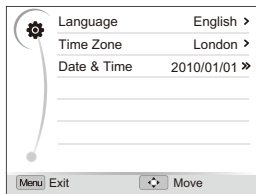

## 2 Press **[ISO]** to select **Language**, and then press **[ISO]** or **[OK]**.


## 3 Press **[DISP]** or **[👉]** to select a language, and then press **[OK]**.

## 4 Press **[DISP]** or **[👉]** to select **Time Zone** (Time Zone), and then press **[ISO]** or **[OK]**.

## 5 Press **[DISP]** or **[👉]** to select **Home** (Home), and then press **[OK]**.


## 6 Press **[🌐]** or **[ISO]** to select a time zone, and then press **[OK]**.

- To set the daylight-saving time, press **[DISP]**.

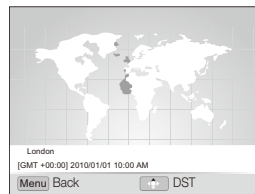

## 7 Press **[DISP]** or **[👉]** to select **Date & Time** (Date & Time), and then press **[ISO]** or **[OK]**.


- 8 Press [**⚡**] or [**ISO**] to select an item.

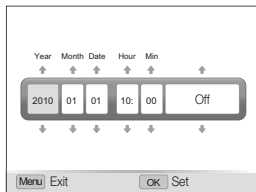

- 9 Press [**DISP**] or [**🍷**] to set the date and time or select a date format, and then press [**OK**].

# Learning icons

The icons displayed will change according to the mode you select or the options you set.

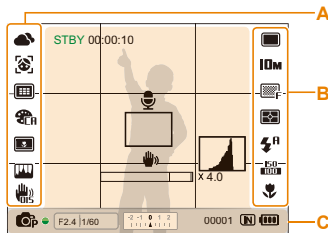

## A. Icons on the left

Icon	Description
	White balance
	Face detection
	Focus area option
	Photo style
	Smart filter effect
	Image adjustment (contrast, sharpness, saturation)
	Optical Image Stabilization (OIS)

## B. Icons on the right

Icon	Description
	Single shot
	Precapture mode
	Interval mode
	Bracket mode
	High-speed burst mode
	Timer
	Photo resolution
	Video resolution
	Frame rate
	Photo quality
	Metering option
	Flash option
	Flash intensity
	ISO speed
	Auto focus option

## C. Information

Icon	Description
	Selected shooting mode
F2.4	Aperture value
1/60	Shutter speed
	Exposure value
00001	Available number of photos
	Internal memory
	Memory card inserted
	<ul style="list-style-type: none"> <li> : Fully charged</li> <li> : Partially charged</li> <li> (Red) : Charging needed</li> </ul>
00:00:10	Available recording time
	Voice memo
	Auto focus frame
	Camera shake
	Zoom ratio x 4.0
	Histogram (p. 26)

 
# Selecting options

You can select options by pressing **[MENU]** and using the navigation buttons (**[DISP]**, **[UP]**, **[DOWN]**, **[ISO]**).




You can also access shooting options by pressing **[Fn]** but some options are not available.

- 1 In Shooting mode, press **[MENU]**.
- 2 Rotate or press the navigation button to scroll to an option or menu.
  - To move up or down press **[DISP]** or **[UP]**. To move left or right press **[DOWN]** or **[ISO]**.



- Rotate the navigation button any direction.

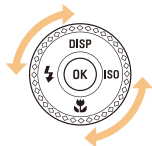

- 3 Press **[OK]** to confirm the highlighted option or menu.

## Going back to the previous menu

Press **[MENU]** again to go back to the previous menu.




Press **[Shutter]** to return to Shooting mode.



**E.g. Selecting the white balance option in Program mode**


- 1 Rotate the mode dial to **P**.

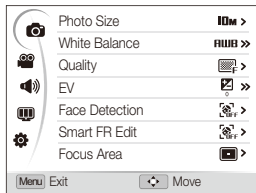



- 2 Press **[MENU]**.




- 3 Rotate the navigation button or press **[DISP]** or **[** to scroll to , and then press **[ISO]** or **[OK]**.

- 4 Rotate the navigation button or press **[DISP]** or **[** to scroll to **White Balance**, and then press **[ISO]** or **[OK]**.

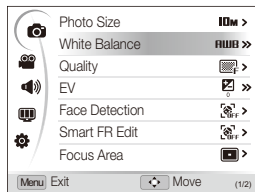

- 5 Rotate the navigation button or press **[** or **[ISO]** to scroll to the white balance option.

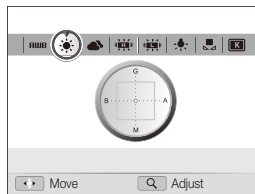

- 6 Press **[OK]** to save your settings.
- 7 Press **[MENU]** to switch to Shooting mode.


# Setting the display and sound

Learn how to change the basic information the camera displays and the sound settings.

## Changing the information displayed

Select the information displayed in Shooting or Playback mode.

Press **[DISP]** repeatedly to change the information displayed.

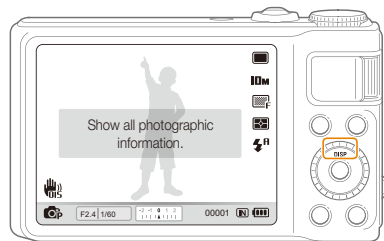


Mode	Information display option
Shooting	<ul style="list-style-type: none"><li>• Hide all information about shooting.</li><li>• Hide information about shooting, except information of the bottom line.</li><li>• Display all information about shooting.</li><li>• Display histogram.</li></ul>
Playback	<ul style="list-style-type: none"><li>• Hide all information about the current file.</li><li>• Display all information about the current photo.</li><li>• Display information about the current file, except the shooting settings and histogram.</li></ul>

### About a histogram

A histogram is a graph that displays how light is distributed in your photo. If the histogram has a high peak on the left, your photos are dark. A peak on the right of the graph means that your photos are bright. The height of the peaks is related to color information. The more of a particular color, the taller the peak.



 Underexposed



Well Exposed



Overexposed

## Setting the sound

Set whether your camera emits a specified sound when you operate your camera.

1 In Shooting or Playback mode, press **[MENU]**.

2 Select  → **Beep Sound** → an option.

Option	Description
Off	The camera does not emit any sounds.
1/2/3	The camera emits sounds.


# Taking photos

Learn basic actions to take photos easily and quickly in the Smart Auto mode.


- 1 Rotate the mode dial to **CS**.



- 2 Align your subject in the frame.

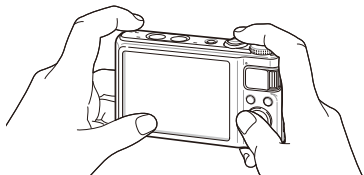

- 3 Half-press **[Shutter]** to focus.
- A green frame means the subject in focus.

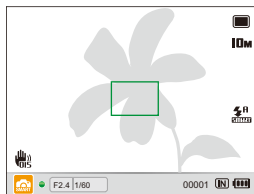

- 4 Press **[Shutter]** to take a photo.




See page 32 for tips to get clearer photos.

## Zooming

You can shoot close-up photos by adjusting the zoom. Your camera has a 5X optical zoom and 4X digital zoom. By using both, you can zoom in up to 20 times.

Rotate **[Zoom]** right to zoom in on your subject. Rotate **[Zoom]** left to zoom out.

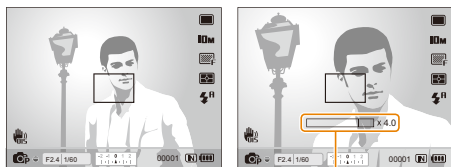


Zoom ratio



## Digital zoom


If the zoom indicator is in the digital range, your camera is using the digital zoom. The picture quality may deteriorate when you use the digital zoom.

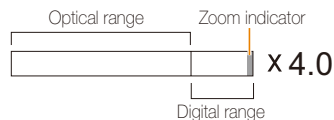

- The digital zoom is not available when you use **CS**, **DUAL**, **SCN** (in some scenes), and **SR** modes and when you use **Face Detection**, **Manual Focus**, **Smart Filter**, **Tracking AF**, and **Smart Range**.
- It may take longer to save a photo when using the digital zoom.

## Reducing camera shake (OIS) P A S M SCN

 Reduce camera shake optically in Shooting mode.




Before correction



After correction

1 In Shooting mode, press **[MENU]**.

2 Select  → **OIS** → an option.

Option	Description
	<b>Off:</b> Deactivate the OIS function.
	<b>On:</b> Activate the OIS function.




- OIS may not function properly when:
  - You move your camera to follow a moving subject.
  - You use digital zoom.
  - There is too much camera shake.
  - The shutter speed is slow.  
(For example, when you select **Night** in the **SCN** mode)
  - The battery is low.
  - You take a close-up shot.
- If you use the OIS function with a tripod, your images may be blurred by the vibration of the OIS sensor. Deactivate the OIS function when you use a tripod.
- If the camera is impacted, the display will be blurry. In this case, turn off the camera and turn it on again to use the OIS function correctly.
- In some scene modes, the OIS function is unavailable.

# Using the drive mode dial

Using the drive mode dial, you can change the burst mode or set the timer.

Rotate the drive mode dial to one of the following options.

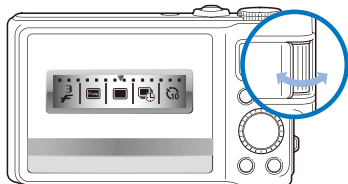


Icon	Mode	Description
	Single	Take a single photo.
	Interval	<ul style="list-style-type: none"> <li>Take a set number of photos at a set interval. (p. 57)</li> <li>Use a tripod to prevent blurry photos if you shoot for a long time.</li> </ul>
	10 Sec	<ul style="list-style-type: none"> <li>Set the timer to delay shooting. (p. 54)</li> </ul>
	2 Sec	<ul style="list-style-type: none"> <li>Take a photo in 10 or 2 seconds.</li> </ul>
	Bracket	According to a bracketing option (p. 58), <ul style="list-style-type: none"> <li>Take 1 photo and create 8 photos with different photo styles.</li> <li>Take 3 photos with different white balance.</li> <li>Take 3 photos with different exposures.</li> </ul>

Icon	Mode	Description
	10fps	<ul style="list-style-type: none"> <li>High-speed burst mode (p. 55)</li> </ul>
	5fps	<ul style="list-style-type: none"> <li>Select the number of photos to capture in a high-speed burst. You can capture up to 10 photos in one burst.</li> </ul>
	3fps	
	Precapture	<ul style="list-style-type: none"> <li>Use this mode to catch the first couple of important shots. (p. 56)</li> <li>Take a series of 8 photos when you press the shutter halfway down and the last one after you press the shutter.</li> </ul>
	1000fps	<ul style="list-style-type: none"> <li>The number of frames per second for recording videos</li> <li>When you select 1000 FPS, 480 FPS, or 240 FPS, you can record high-speed videos. (p. 48)</li> </ul>
	480fps	
	240fps	
	30 FPS	

\* The options may differ depending on the shooting mode.


## Tips for getting a clearer photo

### Holding your camera correctly

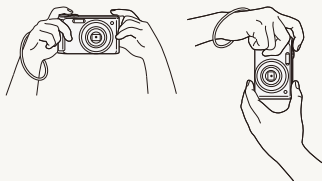


Make sure nothing is blocking the lens.

### Half-pressing the shutter button

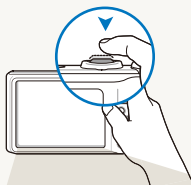

Half-press **[Shutter]** and adjust the focus. Focus and exposure will be adjusted automatically.

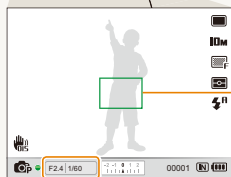

#### Focus frame

- Press **[Shutter]** to take the photo if displayed in green.
- Change the frame and half-press **[Shutter]** again if displayed in red.


The aperture value and shutter speed are set.

### Reducing camera shake



- Set the Optical Image Stabilization option to reduce camera shake optically. (p. 30)
- Select the **DUAL** mode to reduce camera shake both optically and digitally. (p. 45)

### When is displayed

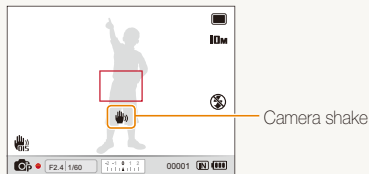

When shooting in the dark, avoid setting the flash option to **Slow Sync** or **Off**. The aperture remains open longer and it may be harder to hold the camera still.

- Use a tripod or set the flash option to **Fill in**. (p. 59)
- Set ISO speed options. (p. 61)



## Preventing your subject from being out of focus



It may be difficult to get your subject in focus when:

- There is little contrast between the subject and background.  
(When your subject is wearing a color of clothing that is similar to the background.)
- The light source behind the subject is too bright.
- The subject is shiny.
- The subject includes horizontal patterns, such as blinds.
- The subject is not positioned in the center of the frame.



### Use the focus lock

Half-press **[Shutter]** to focus. When the subject is in focus, you can reposition the frame to change the composition. When you are ready, press **[Shutter]** to take your photo.

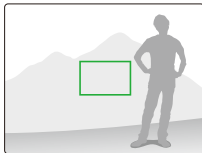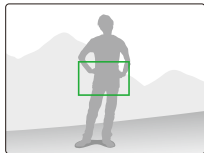


- When you take photos in low light



Turn on the flash.  
(p. 59)

- When subjects are moving fast

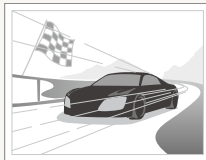

Use the High-speed burst mode (p. 55) or the Precapture mode (p. 56).


# Extended functions


Learn how to take a photo by selecting a mode and how to record a video or voice memo.







<b>Using the Smart Auto mode</b>	35
<b>Using the Scene mode</b>	37
Using the Panorama mode	37
Using the Panorama Action mode	39
Using the Beauty Shot mode	40
<b>Using the Program mode</b>	41
<b>Using the Aperture Priority, Shutter Priority, or Manual mode</b>	42
Using the Aperture Priority mode	43
Using the Shutter Priority mode	43
Using the Manual mode	44
<b>Using the DUAL IS mode</b>	45
<b>Recording a video</b>	46
Recording high-speed videos	48
Using the Smart Scene Detection mode	49
<b>Recording voice memos</b>	50
Recording a voice memo	50
Adding a voice memo to a photo	50

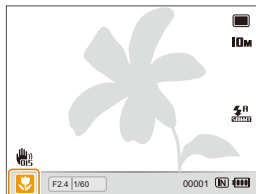










# Using the Smart Auto mode

In this mode, your camera automatically chooses the appropriate camera settings based on a detected type of scene. The Smart Auto mode will be helpful if you are not familiar with the camera settings for various scenes.

- 1 Rotate the mode dial to .
- 2 Align your subject in the frame.
  - The camera selects a scene automatically. An appropriate scene mode icon appears at the bottom left of the screen.





Icon	Description
	Appears when taking photos of landscapes.
	Appears when taking photos with bright white backgrounds.
	Appears when taking photos of landscapes at night. This is available only when the flash is off.
	Appears when taking portraits at night.
	Appears when taking photos of landscapes with backlighting.
	Appears when taking portraits with backlighting.

Icon	Description
	Appears when taking portraits.
	Appears when taking close-up photos of objects.
	Appears when taking close-up photos of text.
	Appears when taking photos of sunsets.
	Appears when taking photos of clear skies.
	Appears when taking photos of forested areas.
	Appears when taking close-up photos of colorful subjects.
	Appears when taking close-up portraits of people.
	Appears when the camera and subject are stable for a while. This is available only when you are shooting in the dark.
	Appears when taking photos of actively moving subjects.
	Appears when taking photos of fireworks. This is available only when you use a tripod.

3 Half-press **[Shutter]** to focus.

4 Press **[Shutter]** to take the photo.




- If the camera does not recognize a proper scene mode,  appears and the default settings are used.
- Even if there is a face detected, the camera may not select a portrait mode depending on the subject's position or lighting.
- The camera may not select the correct scene depending on shooting environments, such as camera shake, lighting, and distance to the subject.
- Even if you use a tripod, the  mode may not be detected depending on the subject's movement.

# Using the Scene mode

Take a photo with options preset for a specific scene.

- 1 Rotate the mode dial to **SCN**.
- 2 Select a scene.

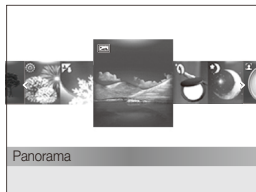

- To change the scene mode, press **[MENU]** and select **SCENE** → a scene.
  - For the Panorama mode, see "Using the Panorama mode."
  - For the Beauty Shot mode, see "Using the Beauty Shot mode" on page 40.
- 3 Align your subject in the frame and half-press **[Shutter]** to focus.
  - 4 Press **[Shutter]** to take the photo.

## Using the Panorama mode


Capture and combine a series of photos to imitate a wide angle view.



- 1 Rotate the mode dial to **SCN**.
- 2 Select **Panorama**.
- 3 Aim the camera lens at your subject and press and hold **[Shutter]** to capture the first shot.

#### 4 With the button pressed, slowly move the camera to the direction you selected.

- When the viewfinder is aligned to the next scene, the camera captures the next photo automatically.

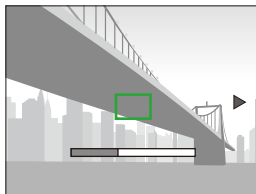

#### 5 When you are finished, release [Shutter].

- When you have captured all the shots necessary for the panoramic photo, the camera combines them into one panoramic photo.




- Panoramic photos may fail when:
  - You move the camera too fast or too slowly.
  - You rotate the camera at a small degree.
  - You shake the camera.
  - You move the camera to a different direction.
  - You are shooting in a dark place.
  - You capture a subject moving nearby.
  - You are shooting under changeable light conditions.
- The resolution of photos is set to **1M**.
- Selecting the Panorama mode will disable digital and optical zoom functions.
- Some shooting options are not available in the Panorama mode.
- The camera may stop shooting in the Panorama mode due to the shooting composition or the subject's movement.

## Using the Panorama Action mode

In the Panorama Action mode, you can capture and combine a series of photos of a moving subject.



- 1 Rotate the mode dial to **SCN**.
- 2 Select **Panorama**.
- 3 Press [**MENU**].
- 4 Select  → **Panorama Action** → **On**.
- 5 Press [**MENU**] to switch to Shooting mode.

- 6 Press and hold [**Shutter**] and aim the camera at the subject.

- If there is more than one moving subject, the camera may not recognize the correct subject.

- 7 When you are finished, release [**Shutter**].


- The camera automatically combines the shots into one photo.




- Panoramic photos may fail when:
  - You move the camera too fast or too slowly.
  - You rotate the camera at a small degree.
  - You shake the camera.
  - You move the camera to a different direction.
  - You are shooting in a dark place.
  - You capture a subject moving nearby.
  - You are shooting under changeable light conditions.
- The resolution of photos is set to VGA.
- The camera may take time to save panoramic photos.
- Some shooting options are not available in the Panorama Action mode.

## Using the Beauty Shot mode


Take a photo of a person with options to hide facial imperfections.

- 1 Rotate the mode dial to **SCN**.
- 2 Select **Beauty Shot**.
- 3 To make the subject's skin tone appear lighter (face only), press **[MENU]**.
- 4 Select  → **Face Tone** → an option.
  - Select a higher setting to make skin tone appear lighter.

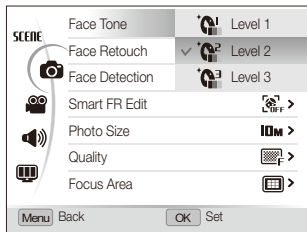

- 5 To hide facial imperfections, select **Face Retouch** → an option.

- Select a higher setting to hide a greater number of imperfections.

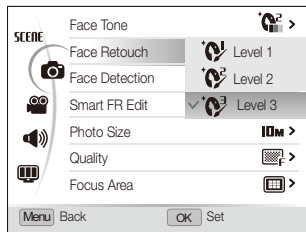

- 6 Press **[MENU]** to switch to Shooting mode.
- 7 Align your subject in the frame and half-press **[Shutter]** to focus.
- 8 Press **[Shutter]** to take the photo.




The focus distance will be set to **Auto Macro**.

# Using the Program mode

In the Program mode, you can set various options except the shutter speed and aperture value, which the camera sets automatically.

- 1 Rotate the mode dial to **P**.
- 2 Set options. (For a list of options, refer to “Shooting options.”)

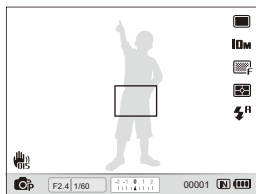

- 3 Align your subject in the frame and half-press [**Shutter**] to focus.
- 4 Press [**Shutter**] to take the photo.

# Using the Aperture Priority, Shutter Priority, or Manual mode

Adjust aperture value or shutter speed to control the exposure of your photos. You can use these options in the Aperture Priority, Shutter Priority, and Manual modes.

## Aperture value

The aperture is a hole through which light is admitted. You can adjust the aperture value to control how much light reaches the lens when you capture a photo. By decreasing the aperture value (opening the aperture wider), more light will enter and objects that are farther away will appear out of focus. This is good for close-up or portrait shots to draw attention to the main subject. Alternatively, as you increase the aperture value, objects from near to far are in sharp focus. This is good for landscape shots to show the entire scope of the scene.



Big aperture value



Small aperture value

## Shutter speed

Shutter speed controls how long the camera's shutter remains open when you capture a photo. When you decrease the shutter speed, more light enters your camera and the photo will appear brighter. However, a slower shutter speed can also result in blurry photos if either the subject or the camera is moving. When you increase the shutter speed, the photo will appear darker. However, a faster shutter speed will also reduce the blurring if your subject or the camera is in motion.



Slow shutter speed




Fast shutter speed

## Using the Aperture Priority mode

The Aperture Priority mode allows you to manually set the aperture value while the camera automatically selects an appropriate shutter speed.

- 1 Rotate the mode dial to **A**.
- 2 Rotate the navigation button to adjust the aperture value.
  - See page 42 for more information about the aperture value.

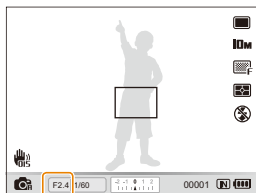


- 3 Set options. (For a list of options, refer to “Shooting options.”)
- 4 Align your subject in the frame and half-press [**Shutter**] to focus.
- 5 Press [**Shutter**] to take the photo.

## Using the Shutter Priority mode

The Shutter Priority mode allows you to manually set the shutter speed while the camera automatically selects an appropriate aperture value.

- 1 Rotate the mode dial to **S**.
- 2 Press [**OK**] and rotate the navigation button to adjust the shutter speed.
  - See page 42 for more information about the shutter speed.

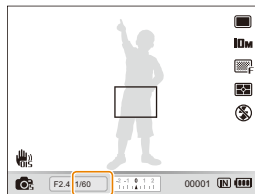


- 3 Set options. (For a list of options, refer to “Shooting options.”)
- 4 Align your subject in the frame and half-press [**Shutter**] to focus.
- 5 Press [**Shutter**] to take the photo.

## Using the Manual mode

The Manual mode allows you to manually adjust both the aperture value and the shutter speed.

- 1 Rotate the mode dial to **M**.
- 2 Rotate the navigation button to adjust the aperture value.

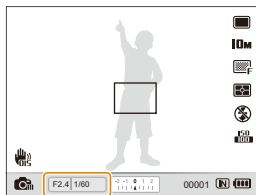


- 3 Press **[OK]** to select the aperture value.

- 4 Rotate the navigation button to adjust the shutter speed.
- 5 Press **[OK]** to save the shutter speed.
- 6 Set options. (For a list of options, refer to “Shooting options.”)
- 7 Align your subject in the frame and half-press **[Shutter]** to focus.
- 8 Press **[Shutter]** to take the photo.

# Using the DUAL IS mode


Reduce camera shake and prevent blurred photos with Optical and Digital Image Stabilization functions.

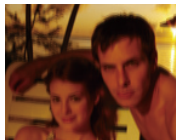

Before correction



After correction

- 1 Rotate the mode dial to  **DUAL**.
- 2 Align your subject in the frame and half-press [**Shutter**] to focus.
- 3 Press [**Shutter**] to take the photo.



- The digital zoom will not work in this mode.
- The photo will be corrected optically only when taken with a light source that is brighter than fluorescent light.
- If your subject is moving rapidly, the photo may be blurry.
- Set the Optical Image Stabilization option to reduce camera shake in different shooting modes. (p. 30)

# Recording a video

Record videos of up to 20 minutes in length. The recorded video is saved as an H.264 (MPEG-4.AVC) file.




- H.264 (MPEG-4 part10/AVC) is a high-compression video format established by international standard organizations ISO/IEC and ITU-T.
- Some memory cards may not support high definition recording. In this case, set a lower resolution. (p. 52)
- Memory cards with slow writing speed will not support high-resolution videos and high-speed videos. To record high-resolution or high-speed videos, use memory cards with fast writing speed.
- When the Optical Image Stabilization is activated, your video may be recorded with the OIS operation sound.
- The zoom sound may be recorded if you use the zoom while recording a video.

1 Rotate the mode dial to .


- To record high-speed videos, set the frame rate to 1000 FPS, 480 FPS or 240 FPS. (p. 48)
- The video frame size may appear smaller while you are recording a video depending on video resolution and frame rate.

2 Press [MENU].

3 Select  → **Voice** → a sound option.


Option	Description
	<b>Off:</b> Record a video without sound.
	<b>On:</b> Record a video with sound.
	<b>Zoom Mute:</b> Record a video without sound while zooming.

4 Press [MENU] to switch to Shooting mode.

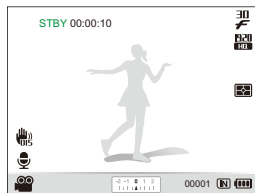



5 Set other options as desired.  
(For options, refer to “Shooting options.”)

6 Press  (Recorder) to start recording.

7 Press  (Recorder) again to stop recording.



- You do not need to rotate the mode dial to  to record a video. You can start recording a video in any mode by pressing  (Recorder).
- Frame rate options may vary depending on video resolution.
- If a message that the memory is full appears while you are recording a high-resolution video, change the resolution to the lower one to increase the remaining memory capacity.


### Frame rate available for each resolution

	Resolution	Frame rate
Wide (16:9)	1920 X 1080 HQ	30 FPS
	1920 X 1080	30 FPS
	1280 X 720	30 FPS
	192 X 64	1000 FPS
Standard (4:3)	432 X 320	240 FPS
	224 X 160	480 FPS
	640 X 480	30 FPS
	320 X 240	30 FPS

### To pause recording

The camera allows you to pause temporarily while recording a video. With this function, you can record several scenes as a single video.

Press **[OK]** to pause while recording. Press it again to resume.

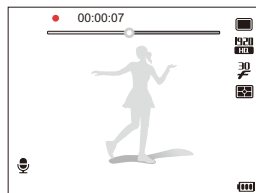

### Capturing still images while recording a video

You can capture still images while recording a video without switching to the photo shooting modes (up to six photos).

Press **[Shutter]** to capture images while recording a video.

- Captured images will be saved automatically.



- Captured photos have the same resolution as a video. However, when the video resolution is 1920 X 1080 HQ or 1920 X 1080, the captured photos have the same resolution as a photo in Shooting mode.
- Captured photos will work as bookmarks to jump to that point in the video. When you select an image on the video screen, the camera plays the video from the selected scene. (p. 87)
- You cannot capture still images while recording high-speed videos.


## Recording high-speed videos

You can record high-speed videos by setting frame rates. High-speed videos will be played in slow motion at 30 FPS, regardless of the frame rate of the video.






- Memory cards with slow writing speeds do not support high-speed videos.
- You cannot set photo styles, smart filter effects, or the Smart Scene Detection mode when recording high-speed videos.
- High-speed videos do not support the optical zoom and voice recording.
- You cannot record high-speed videos while the camera is connected to a TV.


1 Rotate the mode dial to .

-  mode only allows you to record a high-speed video.

2 Rotate the drive mode dial to select a frame rate:


Option	Description
	<b>1000fps:</b> Record 1000 frames per second (for up to 10 seconds).
	<b>480fps:</b> Record 480 frames per second (for up to 3 minutes).
	<b>240fps:</b> Record 240 frames per second (for up to 5 minutes).


3 Press  (Recorder) to start recording.

4 Press  (Recorder) again to stop recording.



## Using the Smart Scene Detection mode

In this mode, your camera automatically chooses the appropriate video settings based on a detected type of scene.

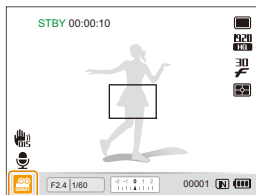
- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Smart Scene Detection** → **On**.
- 3 Press **[MENU]** to switch to Shooting mode.
- 4 Align your subject in the frame.
  - The camera selects a scene automatically. An appropriate scene mode icon appears at the bottom left of the screen.



Icon	Description
	Appears when recording videos of landscapes.
	Appears when recording videos of clear skies.
	Appears when recording videos of forested areas.
	Appears when recording videos of sunsets.

- 5 Press  (Recorder) to start recording.
- 6 Press  (Recorder) again to stop recording.



- If the camera does not recognize a proper scene mode,  will not change and the default settings are used.
- The camera may not select the correct scene depending on shooting environments, such as camera shake, lighting and distance to the subject.
- In the Smart Scene Detection mode, you cannot set smart filter effects and photo styles.
- If you change the burst mode, the Smart Scene Detection mode will be deactivated.

# Recording voice memos


P A S M  DUAL SCN

Learn how to record a voice memo that you can play back at any time. You can add a voice memo to a photo as a short reminder of shooting conditions.



You will get the best sound quality when recording 40 cm away from the camera.


## Recording a voice memo

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Voice** → **Record**.
- 3 Press **[Shutter]** to record.
  - Press **[OK]** to pause or resume recording.
  - You can record voice memos of up to 10 hours in length.



- 4 Press **[Shutter]** to stop.
  - Press **[Shutter]** again to record a new voice memo.
- 5 Press **[MENU]** to switch to Shooting mode.

## Adding a voice memo to a photo

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Voice** → **Memo**.
- 3 Press **[MENU]** to switch to Shooting mode.
- 4 Align your subject in the frame and take a photo.
  - The camera begins to record a voice memo right after you take the photo.
- 5 Record a short voice memo (10 seconds maximum).
  - Press **[Shutter]** to stop recording a voice memo.



You cannot add voice memos to photos in the High-speed burst mode and the Bracket mode.

# Shooting options

Learn about the options you can set in Shooting mode.

<b>Selecting a resolution and quality</b> .....	52	<b>Using face detection</b> .....	66
Selecting a resolution .....	52	Detecting faces .....	66
Selecting image quality .....	53	Taking a self-portrait shot .....	67
<b>Using the timer</b> .....	54	Taking a smile shot .....	67
<b>Using burst modes</b> .....	55	Detecting eye blinking .....	68
Taking photos in the High-speed burst mode .....	55	Using smart face recognition .....	68
Taking photos in the Precapture mode .....	56	Registering faces as your favorites (My Star) ...	69
Taking photos in the Interval mode .....	57	<b>Adjusting brightness and color</b> .....	71
Taking bracketed photos .....	58	Adjusting the exposure manually (EV) .....	71
<b>Shooting in the dark</b> .....	59	Changing the metering option .....	71
Preventing red-eye .....	59	Selecting a light source (White balance) .....	72
Using the flash .....	59	<b>Improving your photos</b> .....	75
Adjusting the ISO speed .....	61	Applying photo styles .....	75
<b>Changing the camera's focus</b> .....	62	Applying smart filter effects .....	76
Using macro .....	62	Adjusting your photos .....	77
Using auto focus .....	62	<b>Using smart range</b> .....	78
Using selection focus .....	63		
Using tracking auto focus .....	64		
Adjusting the focus area .....	65		


# Selecting a resolution and quality








Learn how to change the image resolution and quality settings.



## Selecting a resolution

As you increase the resolution, your photo or video will include more pixels, so it can be printed on larger paper or displayed on a larger screen. When you use a high resolution, the file size will also increase.



### When taking a photo:






- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Photo Size** → an option.

Option	Description
	<b>3648 X 2736</b> : Print on A2 paper in wide ratio (3:2).
	<b>3648 X 2432</b> : Print on A3 paper in wide ratio (3:2).
	<b>3264 X 2448</b> : Print on A3 paper.
	<b>3648 X 2048</b> : Print on A3 paper in panorama ratio (16:9).
	<b>2736 X 2736</b> : Print on A3 paper in 1:1 ratio.
	<b>2592 X 1944</b> : Print on A4 paper.
	<b>2048 X 1536</b> : Print on A5 paper.

Option	Description
	<b>1920 X 1080</b> : Print on A5 paper in panorama ratio (16:9) or play back on an HDTV.
	<b>1024 X 768</b> : Attach to email.

### When recording a video:

- 1 In the  mode, press **[MENU]**.
- 2 Select  → **Movie Size** → an option.


Option	Description
	<b>1920 X 1080 HQ</b> : Play back high-quality files in panorama ratio (16:9) on an HDTV.
	<b>1920 X 1080</b> : Play back in panorama ratio (16:9) on an HDTV.
	<b>1280 X 720</b> : Play back in panorama ratio (16:9) on an HDTV.
	<b>640 X 480</b> : Play back on a general TV.
	<b>320 X 240</b> : Post on a web page.










When a memory card is not inserted, 640 X 480 and 320 X 240 only are supported.

## Selecting image quality P A S M SCN

Photos you take are saved in JPEG or RAW format. Higher quality images will result in larger sizes.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Quality** → an option.

Option	Description
	<b>Super Fine</b>
	<b>Fine</b>
	<b>Normal</b>
	<b>RAW</b>
	<b>RAW + S.Fine</b>
	<b>RAW + Fine</b>
	<b>RAW + Normal</b>

The options may differ depending on the shooting mode.



In the High-speed burst mode, the Precapture mode, and the Bracket mode, you cannot take photos in RAW format, and a RAW option will be set to **Super Fine**.

### What are RAW files?


Photos captured by a camera are often transformed to JPEG format and stored in the memory according to the settings of the camera at the time of shooting. RAW files are not transformed to JPEG format and are stored in the memory without any changes. RAW files have the file extension "RAW" (For example: "SAM-9999 RAW"). To adjust and calibrate exposures, white balances, tones, contrasts, and colors of the RAW files, use the Samsung RAW Converter program supplied in the software CD-ROM. (See page 103)



# Using the timer

CS P A S M  DUAL SCN 

Learn how to set the timer to delay shooting.
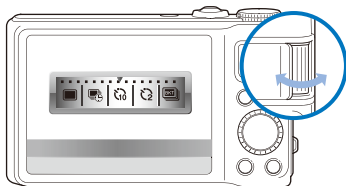
## 1 Rotate the drive mode dial to **2 Sec** or **10 Sec**.



Option	Description
 <b>2</b>	<b>2 Sec:</b> Take a photo in 2 seconds.
 <b>10</b>	<b>10 Sec:</b> Take a photo in 10 seconds.

## 2 Press **[Shutter]** to start the timer.

- The AF-assist light/timer lamp blinks. The camera will automatically take a photo at the specified time.



- Rotate the drive mode dial to **Single** to cancel the timer.
- Depending on the timer option, some face detection options are not available.
- You cannot use the timer in the Panorama mode and the Panorama Action mode.

# Using burst modes

P A S M 


It can be difficult to take photos of fast-moving subjects or capture natural facial expressions and gestures of your subjects in photos. Also, it can be difficult to adjust the exposure correctly and select a proper light source. In these cases, select one of the burst modes.



- You can use the flash, only when you select **Single**.
- Depending on the burst mode, some face detection options are not available.
- In the High-speed burst mode, the Precapture mode, and the Bracket mode, you cannot take photos in RAW format.
- In the High-speed burst mode, the Precapture mode, and the Bracket mode, you cannot set face detection options, some photo styles (**Sketch** and **Defog**), **Smart Filter**, **Tracking AF**, or **Smart Range**.

## Taking photos in the High-speed burst mode

- 1 Rotate the drive mode dial to one of the high-speed burst options.

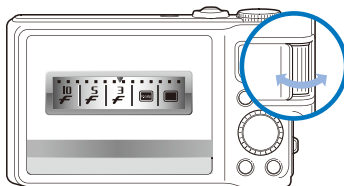

Option	Description
	<b>10fps</b> : Take 10 photos per second continuously.
	<b>5fps</b> : Take 5 photos per second continuously.
	<b>3fps</b> : Take 3 photos per second continuously.

## 2 Press and hold [Shutter].

- While you are pressing [Shutter], the camera takes photos continuously.



- You can capture up to 10 photos in one burst.
- It may take longer to save the photos depending on the memory card capacity and performance.
- The camera always displays captured photos before returning to Shooting mode.

## Taking photos in the Precapture mode

In the Precapture mode, the camera starts shooting before you even press the shutter all the way down. If you do not want to miss the first couple of important shots, simply use this mode and select the photo with the best results after shooting.

### 1 Rotate the drive mode dial to **Precapture**.

### 2 Align your subject in the frame and half-press [Shutter] to focus.

- The camera takes 8 photos continuously.



If you release [Shutter] too fast, the camera will take less than 8 photos.

### 3 Press [Shutter].

- The camera takes the last photo and then saves all of the captured photos while you are half-pressing [Shutter].
- If you do not press [Shutter] all the way down, the photos captured while you are half-pressing [Shutter] will not be saved.

## Taking photos in the Interval mode

In the Interval mode, you can take a set number of photos at a set interval over a period of time. The captured photos show the natural progression of time. This mode is helpful to capture the movement of clouds or opening of flower buds.



- In the Interval mode, the camera captures multiple photos for certain period of time. You need to check the remaining battery and memory capacity before using this function. When the battery or memory capacity is insufficient, the camera automatically stops capturing photos.
- You can set the shooting interval from 1 minute and you can capture photos in the Interval mode for up to 48 hours.
- If you press **[POWER]** when the camera is turned off, the Interval mode will be deactivated. Use caution to avoid pressing **[POWER]**, as the camera does not display any indicators in the Interval mode.
- When you half-press **[Shutter]**, press **[Shutter]**, or **○** (Recorder), the Interval mode is deactivated.

1 Rotate the drive mode dial to **Interval**.

2 In Shooting mode, press **[MENU]**.

3 Select  → **Interval**.

4 Select an option.

Option	Description
<b>Interval</b>	Set the shooting interval.
<b>No. of Shots</b>	Set the number of photos to capture.

5 Align your subject in the frame.

6 Turn off the camera.

- The camera automatically turns on and takes the first shot after about 1 minute. After the first shot, the camera turns off.
- The camera automatically turns on after the interval you set and takes the next photo.



If you rotate the mode dial when the camera turns off in the Interval mode, the selected shooting mode may not work properly.

## Taking bracketed photos

You can use the automatic bracketing feature to take multiple photos of the same subject with different setting values slightly modified, such as exposure, white balance, or photo style.

1 Rotate the drive mode dial to **Bracket**.

2 Press **[Shutter]**.

- If **WB BKT** or **AE BKT** is selected, the camera takes 3 photos continuously.
- If **PSS BKT** is selected, the camera takes 1 photo and creates 8 photos with different photo styles. The original photo is saved automatically and you can select one additional photo to save.






Use a tripod to prevent blurry photos.

### Selecting a bracketing option

1 In Shooting mode, press **[MENU]**.

2 Select  → **Bracket**.

3 Select a bracketing option.

Option	Description
	<b>PSS BKT</b> : Take 1 photo and create 8 photos with different photo styles.
	<b>WB BKT</b> : Take 3 photos with different white balance.
	<b>AE BKT</b> : Take 3 photos with selected exposures.

4 Adjust the color for the selected light source (white balance) or select an exposure value.

5 Press **[OK]** to save your settings.

# Shooting in the dark

Learn how to take photos at night or in low light conditions.

## Preventing red-eye P SCN


If the flash fires when you take a photo of a person in the dark, a red glow may appear in the eyes. To prevent this, select **Red-eye** or **Red-eye Fix**. Refer to flash options in "Using the flash."






## Using the flash Cs P A S M SCN



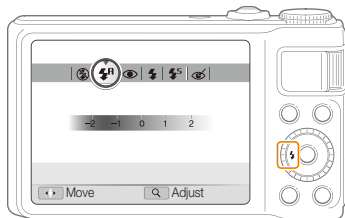


Use the flash when taking photos in the dark or when you need more light on your photos.

1 In Shooting mode, press [Fn].



2 Select an option.

Option	Description
	<b>Off:</b> <ul style="list-style-type: none"><li>The flash does not fire.</li><li>Camera shake warning () will be displayed when shooting in low light.</li></ul>
	<b>Auto:</b> The flash fires automatically when the subject or background is dark.

Option	Description
	<b>Auto:</b> The camera will select a proper flash setting for the detected scene in the <b>CS</b> mode.
	<b>Red-eye*:</b> <ul style="list-style-type: none"> <li>The flash fires when the subject or background is dark.</li> <li>The camera reduces red-eyes.</li> </ul>
	<b>Fill in:</b> <ul style="list-style-type: none"> <li>The flash always fires.</li> <li>Light intensity is adjusted automatically.</li> </ul>
	<b>Slow Sync:</b> <ul style="list-style-type: none"> <li>The flash fires and the shutter stays open longer.</li> <li>Select this when you want to capture ambient light to reveal more details in the background.</li> <li>Use a tripod to prevent your photos from blurring.</li> </ul>
	<b>Red-eye Fix*:</b> <ul style="list-style-type: none"> <li>The flash fires when the subject or background is dark.</li> <li>The camera corrects red-eyes through its advanced software analysis.</li> </ul>

The options may differ depending on the shooting mode.


\* There is an interval between two bursts of the flash. Do not move until the flash fires a second time.




- Flash options are not available if you set the High-speed burst mode, the Precapture mode, or the Bracket mode, or if you select **Self-Portrait** or **Blink Detection**.
- Make sure that your subjects are within the recommended distance from the flash. (p. 124)
- If there is reflected light or much dust in the air, tiny spots may appear on your photo.


### Adjusting the flash intensity

 Adjust the flash intensity to avoid overexposure or underexposure.

- In Shooting mode, press [].
- Scroll to an option.
- Rotate **[Zoom]** right.



#### 4 Adjust the intensity.

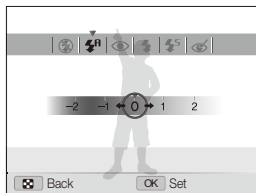

#### 5 Press **[OK]** to save your settings.




- Adjusting the flash intensity may not be effective if:
  - The subject is too close to the camera.
  - You set a high ISO speed.
  - The exposure value is too big or too small.
- In some shooting modes, you cannot use this function.

### Adjusting the ISO speed P A S M

The ISO speed is the measure of a film's sensitivity to light as defined by the International Organization for Standardization (ISO). The higher ISO speed you select, the more sensitive to light your camera becomes. With a higher ISO speed, you can get a better photo without using the flash.

#### 1 In Shooting mode, press **[ISO]**.

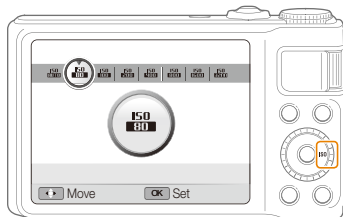

#### 2 Select an option.

- Select **ISO 800** to use an appropriate ISO speed based on the brightness of the subject and lighting.



The higher ISO speed you select, the more image noise you may get.

# Changing the camera's focus

Learn how to adjust the camera's focus according to your subjects.

## Using macro PASM


Use macro to take close-up photos of subjects, such as flowers or insects. Refer to macro options in "Using auto focus."




- Try to hold the camera very still to prevent blurry photos.
- Turn off the flash if the distance to the subject is less than 40 cm.




## Using auto focus PASM

To take sharp photos, select the appropriate focus according to your distance from the subject.

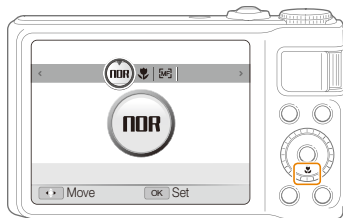1 In Shooting mode, press [].




2 Select an option.

Option	Description
NOR	<b>Normal (AF):</b> Focus on a subject farther than 50 cm.
	<b>Macro:</b> Focus on a subject 5-50 cm away (50-80 cm away when using zoom).
	<b>Auto Macro:</b> Focus on a subject farther than 5 cm (farther than 50 cm away when using zoom).
	<b>Manual Focus:</b> Focus on a subject by manually adjusting the focus distance. (p. 63)

The options may differ depending on the shooting mode.

### Adjusting the focus distance manually

- 1 In Shooting mode, press [🌺].
- 2 Scroll to **Manual Focus**.
- 3 Rotate [Zoom] right.
- 4 Press or rotate the navigation button to adjust the focus distance.

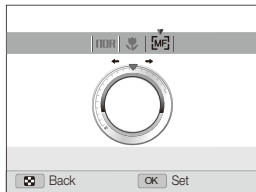

- 5 Press [OK] to save your settings.




- When you adjust the focus distance manually and the subject is out of focus, the photo may become blurry.
- If you use this function, you cannot set focus area options and face detection options.

### Using selection focus PASM DUAL

You can focus on a particular part of your scene. Select where you want to focus.

- 1 In Shooting mode, press [MENU].
- 2 Select → **Focus Area** → **Selection AF**.
- 3 Press [MENU] to switch to Shooting mode.

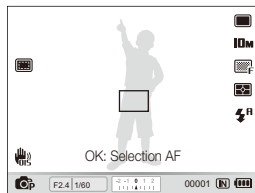


- 4 Press [OK].
- 5 Move the frame to the area you want to focus and press [OK].
- 6 Press [Shutter] to take the photo.
  - Press [OK] to change the focus area.




If you use this function, you cannot set face detection, photo style options, and smart filter effects.

## Using tracking auto focus P A S M

Tracking AF allows you to track and auto focus on your subject, even when you are moving.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Focus Area** → **Tracking AF**.
- 3 Press **[MENU]** to switch to Shooting mode.
- 4 Focus on the subject you want to track and press **[OK]**.
  - A focus frame appears on the subject and follows the subject as you move the camera.

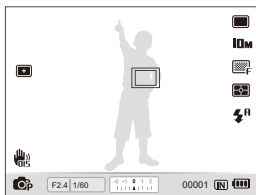


- The white frame means that your camera is tracking the subject.
- The green frame means that your subject is in focus when you half-press **[Shutter]**.







- Tracking a subject may fail when:
    - The subject is too small or the subject moves excessively.
    - The subject is backlit or you are shooting in a dark place.
    - Colors or patterns on the subject and the background are the same.
    - The camera shakes excessively.
- In these cases, the focus frame appears as a white single-line frame.
- If the camera fails to track the subject, you must reselect the subject to track.
  - If the camera fails to fix the focus, the focus frame changes to a red single-line frame.
  - If you use this function, you cannot set face detection, photo style options, and smart filter effects.

## Adjusting the focus area P A S M SCN

You can get clearer photos by selecting an appropriate focus area according to your subject's location in the scene.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Focus Area** → an option.

Option	Description
	<b>Center AF:</b> Focus on the center (suitable when subjects are located in the center).
	<b>Multi AF:</b> Focus on one or more of 9 possible areas.
	<b>Selection AF:</b> Focus on the area you select. (p. 63)
	<b>Tracking AF:</b> Focus on and track the subject. (p. 64)

The options may differ depending on the shooting mode.

# Using face detection P A S M QUAL SCN


If you use face detection options, your camera can automatically detect a human face. When you focus on a human face, the camera adjusts the exposure automatically. Take photos quickly and easily by using **Blink Detection** to detect closed eyes or **Smile Shot** to capture a smiling face. You can also use **Smart Face Recognition** to register faces and prioritize the focus on them.




- In some **SCN** modes, face detection is unavailable.
- Face detection may not be effective when:
  - The subject is far from the camera. (The focus frame will appear orange for **Smile Shot** and **Blink Detection**.)
  - It is too bright or too dark.
  - The subject is not facing the camera.
  - The subject is wearing sunglasses or a mask.
  - The subject is in backlighting or the lighting condition is unstable.
  - The subject's facial expression changes remarkably.
- Face detection is not available when you use a photo style, smart filter effect, image adjustment option, or when you use **Manual Focus**, **Selection AF**, or **Tracking AF**.
- Face detection is not available when you use the digital zoom.
- Depending on the burst mode, some face detection options are not available.
- When you take photos of detected faces, they will be registered in the face list.
- You can view registered faces in order of priority in Playback mode. (p. 82) Even though faces are registered successfully, they may not be classified in Playback mode.
- The detected face in Shooting mode may not appear in the face list or Smart Album.

## Detecting faces

Your camera automatically detects human faces (up to 10 human faces).

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Face Detection** → **Normal**.

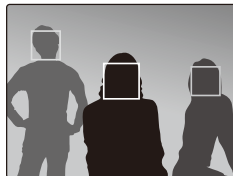


- The nearest face appears in a white focus frame and the rest of the faces appear in gray focus frames.



- The closer you are to the subject, the quicker your camera will detect faces.
- If you set the burst mode, the detected faces may not be recognized.

## Taking a self-portrait shot


Take photos of yourself. The focus distance will be set to close-up and your camera will emit a beep.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Face Detection** → **Self-Portrait**.
- 3 Press **[MENU]** to switch to Shooting mode.
- 4 When you hear a quick beep, press **[Shutter]**.



## Taking a smile shot

The camera automatically releases the shutter when it detects a smiling face.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Face Detection** → **Smile Shot**.
- 3 Press **[MENU]** to switch to Shooting mode.
- 4 Align a smiling face in the frame.
  - When the camera detects the smiling face, it takes a photo automatically.



- When your subject smiles broadly, your camera can detect the smile more easily.

## Detecting eye blinking

If your camera detects closed eyes, it will automatically take 2 photos in succession.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **📷** → **Face Detection** → **Blink Detection**.






When blink detection fails, "Picture taken with eyes closed." message appears. Take another photo.

## Using smart face recognition

The camera automatically registers faces that you frequently photograph (up to 10 people). This feature will automatically prioritize the focus on those faces. This feature is available only when you use a memory card.

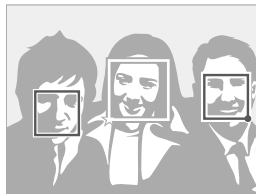- 1 In Shooting mode, press **[MENU]**.
- 2 Select **📷** → **Face Detection** → **Smart Face Recognition**.




- The nearest face appears in a white focus frame and the rest of the faces appear in gray focus frames.
-  : Indicates favorite faces (To register favorite faces, see page 69).
-  : Indicates faces that the camera automatically registers.




- The camera may recognize and register faces incorrectly depending on lighting conditions, unusual changes in the subject's pose or face, and whether or not the subject is wearing glasses.
- The camera can automatically register up to 12 faces. If the camera recognizes a new face when there are 12 registered faces, it will replace the face in the lowest priority with the new one.
- The camera can detect up to 10 faces in one scene.

## Registering faces as your favorites (My Star)

You can register your favorite faces to prioritize the focus and exposure on those faces. This feature is available only when you use a memory card.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Smart FR Edit** → **My Star**.
- 3 Align your subject's face with the oval guideline and press **[Shutter]** to register the face.
  - If the subject's face is not aligned with the oval guideline, the white frame will not appear.
  - You can take photos of a subject's face directly from the front, to the left side, to the right side, from above, or from below.
  - Take photos of one person at a time when registering faces.

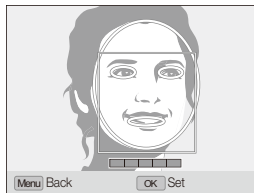

4 When you are finished taking the photos, the face list appears.

- Your favorite faces are indicated with a ★ on the face list.



- You can register up to 8 favorite faces.
- The flash option will be set to **Off**.
- If you register the same face twice, you can delete one of the faces in the face list.

### Viewing your favorite faces

1 In Shooting mode, press **[MENU]**.

2 Select  → **Smart FR Edit** → **Face List**.



- To change the ranking of the favorite faces, press **[Fn]** and select **Edit Ranking**. (p. 81)
- To cancel the favorite faces, press **[Fn]** and select **Delete**. (p. 82)

# Adjusting brightness and color

Learn how to adjust the brightness and color for better image quality.

## Adjusting the exposure manually (EV)

P A S  

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.




Darker (-)



Neutral (0)



Brighter (+)


- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **EV**.
- 3 Select a value to adjust the exposure.
- 4 Press **[OK]** to save your settings.






- Once you adjust the exposure, the setting will remain the same. You may need to change the exposure value later to avoid overexposing or underexposing photos you take later.
- If you cannot decide on an appropriate exposure, change the bracketing mode to **AE BKT** and rotate the drive mode dial to **Bracket**. The camera takes photos with different exposures. (p. 55)

## Changing the metering option P A S M

The metering mode refers to the way in which a camera measures the quantity of light. The brightness and lighting of your photos will vary depending on the metering mode you select.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Metering** → an option.

Option	Description
	<b>Spot:</b> <ul style="list-style-type: none"><li>• Your camera measures only the light intensity of the very center of the frame.</li><li>• If a subject is not in the center of the scene, your photo may be improperly exposed.</li><li>• Suitable for a subject with backlighting.</li></ul>
	<b>Multi:</b> <ul style="list-style-type: none"><li>• Your camera divides the scene into several areas, and then measures the light intensity of each area.</li><li>• Suitable for general photos.</li></ul>
	<b>Center-weighted:</b> <ul style="list-style-type: none"><li>• Your camera averages the meter reading of the entire frame with emphasis placed on the center.</li><li>• Suitable for photos with subjects in the center of the frame.</li></ul>

## Selecting a light source (White balance)

P A S M  

The color of your photo depends on the type and quality of the light source. If you want the color of your photo to be realistic, select an appropriate lighting condition to calibrate the white balance, such as Auto WB, Daylight, Cloudy, or Tungsten, or adjust color temperature manually. You can also adjust color for the preset light sources so that the colors of the photo match the actual scene under mixed lighting conditions.



 Auto WB




 Daylight











 Cloudy




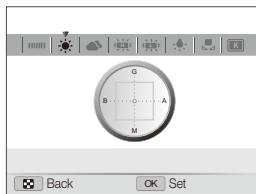
 Tungsten

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **White Balance** → an option.

Option	Description
	<b>Auto WB:</b> Use automatic settings depending on the lighting conditions.
	<b>Daylight:</b> Select when taking outdoor photos on a sunny day.
	<b>Cloudy:</b> Select when taking outdoor photos on a cloudy day or in shadows.
	<b>Fluorescent_H:</b> Select when shooting under a daylight fluorescent or three-way fluorescent light.
	<b>Fluorescent_L:</b> Select when shooting under white fluorescent light.
	<b>Tungsten:</b> Select when taking indoor photos under incandescent bulbs or halogen lamps.
	<b>Custom Set:</b> Use your pre-defined settings. (p. 73)
	<b>Color Temperature:</b> Adjust the color temperature of the light source. (p. 74)

### Customizing preset white balance options


- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **White Balance**.
- 3 Scroll to a white balance option.
- 4 Rotate **[Zoom]** right.
- 5 Press or rotate the navigation button to adjust the value on the coordinates.




- G: Green
- A: Amber
- M: Magenta
- B: Blue

- 6 Press **[OK]** to save your settings.


### Defining your own white balance


- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **White Balance**.
- 3 Scroll to **Custom Set**.
- 4 Aim the lens at a piece of white paper.

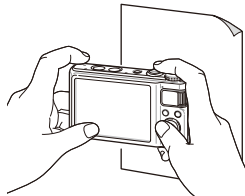

- 5 Press **[Shutter]**.

### Adjusting color temperature


- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **White Balance**.
- 3 Scroll to **Color Temperature**.
- 4 Rotate **[Zoom]** right.
- 5 Press or rotate the navigation button to adjust the color temperature.

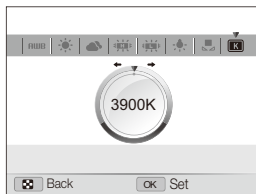

- 6 Press **[OK]** to save your settings.

### Color temperature

Color temperature is a measurement in degrees Kelvin that indicates the hue of a specific type of light source. As the color temperature increases, the color distribution becomes cooler. Alternatively, as the color temperature decreases, the color distribution becomes warmer.

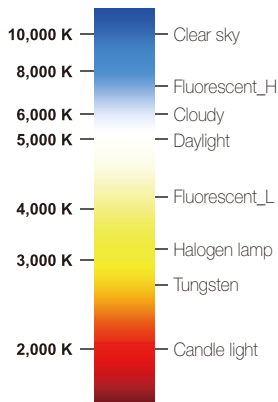

# Improving your photos

Learn how to improve your photos by applying photo styles, colors, or smart filter effects, or by making some adjustments.

## Applying photo styles P A S M

Apply a different photo style to your photos, such as Soft, Vivid, or Forest.




Soft



Vivid




Forest


- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Photo Style Selector** → an option.
  - Select **Custom RGB** to define your own RGB tone.



- When you select **Sketch**, the photo automatically resizes to **5M** or smaller.
- In the High-speed burst mode, the Precapture mode, and the Bracket mode, you cannot use **Sketch** and **Defog**.
- If you use this function, you cannot set face detection, the smart filter effect, and image adjustment option.

## Defining your own RGB tone

- 1 In Shooting mode, press **[MENU]**.
- 2 Select  → **Photo Style Selector**.
- 3 Scroll to **Custom RGB**.
- 4 Rotate **[Zoom]** right.
- 5 Select a color (R: Red, G: Green, B: Blue).

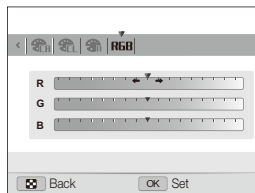

- 6 Adjust the amount of the selected color.  
(-: less or +: more)
- 7 Press **[OK]** to save your settings.

## Applying smart filter effects P A S M

Apply various filter effects to your photos to create unique images.



Miniature



Vignetting



Fish-eye

1 In Shooting mode, press **[MENU]**.

2 Select → **Smart Filter**.

3 Select an effect.

Option	Description
	<b>Normal:</b> No effect.
	<b>Miniature:</b> Make a photo of a life-size location or object look like a photo of a miniature scale model. Blurring parts of the photo makes the scene seem much smaller than it actually is.
	<b>Vignetting:</b> Apply the retro-looking colors, high contrast, and strong vignette effect.
	<b>Fish-eye:</b> Distort close objects to imitate the visual effect of a fisheye lens.




- If you select **Miniature** when recording a video, the miniature recording time is displayed with the icon and is shorter than the real recording time.
- If you select **Miniature** when recording a video, you cannot record the video sound and capture still images from a video.
- When you apply a smart filter effect while recording a video, the video will be automatically resized to **640** or smaller.
- If you use this function, you cannot set face detection, the photo style, and image adjustment options.
- If you change the burst mode, smart filter effects will be deactivated.

## Adjusting your photos P A S M

Adjust the contrast, sharpness, and saturation of your photos.

1 In Shooting mode, press **[MENU]**.

2 Select  → **Image Adjust**.

3 Select an adjustment option.

- Contrast
- Sharpness
- Saturation

4 Select a value to adjust the selected item.

Contrast option	Description
-	Decrease the color and brightness.
+	Increase the color and brightness.

Sharpness option	Description
-	Soften the edges on your photos (suitable for editing the photos on your computer).
+	Sharpen the edges to improve the clarity of your photos. This may also increase the noise on your photos.

Saturation option	Description
-	Decrease the saturation.
+	Increase the saturation.



- Select **0** if you do not want to apply any effects. (suitable for printing)
- If you use this function, you cannot set face detection, a photo style option, and a smart filter effect.

# Using smart range P A S M

Your camera takes two photos with different exposures, and then overlays the bright area of the underexposed photo and the dark area of the overexposed photo.



Without smart range effect




With smart range effect





- The smart range effect may be affected by camera shake, lighting, movement of the subject, and the shooting environment.
- When taking photos at night, slow the ISO speed to reduce noise in your photos.
- When taking photos at night, use a tripod to prevent blurry photos.
- You cannot use the flash when the smart range effect is on.
- It may take longer to save a photo with the smart range effect.
- When you use the smart range effect, the preview image on the screen and the captured photo may appear slightly larger than a photo captured without this effect.

1 In Shooting mode, press **[MENU]**.

2 Select  → **Smart Range**.

3 Select an option.

Option	Description
	<b>Off:</b> The smart range effect is off.
	<b>On:</b> The smart range effect is on.

# Playback/Editing

Learn how to play back photos, videos, or voice memos and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, TV, or HDTV.

<b>Playing back</b> .....	80	<b>Transferring files to your computer</b>	
Starting Playback mode .....	80	<b>(for Mac)</b> .....	102
Viewing photos .....	85	<b>Using Samsung RAW Converter</b> .....	103
Playing a video .....	86	Installing Samsung RAW Converter .....	103
Playing voice memos .....	88	Opening Samsung RAW Converter .....	103
<b>Editing a photo</b> .....	90	Using the Samsung RAW Converter Interface .....	104
Resizing photos .....	90	Editing RAW format files .....	105
Rotating a photo .....	90	Saving RAW files as JPEG/TIFF formats ...	106
Applying photo styles .....	91	<b>Printing photos with a photo printer</b>	
Applying smart filter effects .....	92	<b>(PictBridge)</b> .....	107
Correcting exposure problems .....	93		
Creating a print order (DPOF) .....	94		
<b>Viewing files on a TV or HDTV</b> .....	95		
<b>Transferring files to your computer</b>			
<b>(for Windows)</b> .....	97		
Transferring files using Intelli-studio .....	98		
Transferring files by connecting the camera			
as a removable disk .....	100		
Disconnecting the camera (for Windows XP) .....	101		

# Playing back

Learn actions to play back photos, videos, or voice memos, and manage files.

## Starting Playback mode


View photos or play videos and voice memos stored in your camera.

- 1 Press [▶].
  - The most recent file you have taken or recorded is displayed.
  - If the camera is off, it turns on.
- 2 Rotate the navigation button or press [⚡] or [ISO] to scroll through files.
  - Press and hold [⚡] or [ISO] to scroll through files quickly.




- If you want to view files stored in the internal memory, remove your memory card.
- The camera will not properly play back files that are too large or those taken with cameras from other manufacturers.

### Photo display in Playback mode

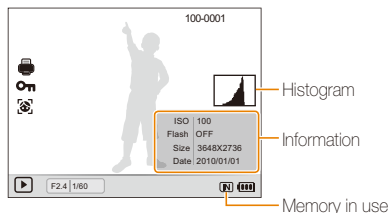

Icon	Description
	Photo includes a voice memo
100-0001	Folder name – File name
	Print order has been set (DPOF)
	Protected file
	Photo includes a registered face; Available only when you use a memory card

### Video display in Playback mode

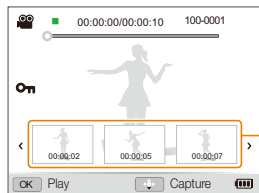


Thumbnail image of bookmark

Icon	Description
	Video file
00:00:00/ 00:00:10	Playback time – Total playback time
100-0001	Folder name – File name
	Protected file

### Ranking your favorite faces


You can change the ranking of your favorite faces. This feature is available only when you use a memory card.

- 1 In Playback mode, press **[MENU]**.
- 2 Select → **Face List Edit** → **Edit Ranking**.
- 3 Scroll to a face from the list and press **[OK]**.

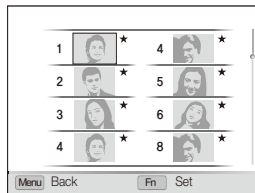

- 4 Rotate the navigation button or press **[DISP]** or to change the ranking of the face, and then press **[Fn]**.


### Canceling your favorite faces

- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **Face List Edit** → **Delete My Star**.
- 3 Scroll to a face and press **[OK]**.
- 4 Press **[Fn]**.
- 5 Select **Yes**.

### Viewing files by category in Smart Album

View and manage files by categories, such as date, file type, or week.

- 1 In Playback mode, rotate **[Zoom]** left.
- 2 Press **[MENU]**.
- 3 Select a category.

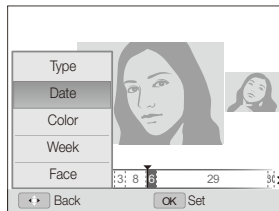

Option	Description
Type	View files by the file type.
Date	View files by the date they were saved.
Color	View files by the dominant color of the image.
Week	View files by the weekday they were saved.
Face	View files by recognized faces and favorite faces. (Up to 20 people)



It may take some time for the camera to open Smart Album or to change the category and recognize files.

#### 4 Rotate the navigation button or press [L/ISO] to scroll through files.

- Press and hold [L/ISO] to scroll through files quickly.


#### 5 Press [OK] to return to the normal view.

### Viewing files as thumbnails

Scan thumbnails of files.




In Playback mode, rotate **[Zoom]** left to display 9 or 20 thumbnails. Rotate **[Zoom]** right to return to the previous mode.

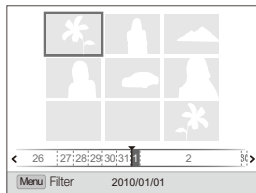


To	Do this
Scroll through files	Rotate the navigation button or press <b>[DISP]</b> , <b>[L/ISO]</b> , <b>[L/ISO]</b> , or <b>[ISO]</b> .
Delete files	Press <b>[Fn]</b> and select <b>Yes</b> .

### Protecting files

Protect your files from accidental deletion.

- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **Protect** → **Select**.
  - To protect all files, select **All** → **Lock**.
- 3 Select the file you want to protect and press **[OK]**.
  - Press **[OK]** again to cancel your selection.

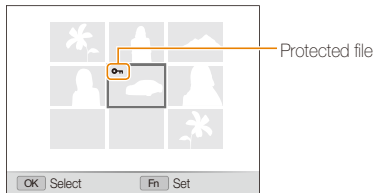

- 4 Press **[Fn]**.

### Deleting files

Delete single files or all files at once. You cannot delete protected files.

**To delete a single file,**

- 1 In Playback mode, select a file and press **[Fn]**.
- 2 Select **Yes** to delete the file.

**To delete multiple files,**


- 1 In Playback mode, press **[Fn]**.
- 2 Select **Multiple Delete**.
- 3 Select files you want to delete and press **[OK]**.
  - Press **[OK]** again to cancel your selection.
- 4 Press **[Fn]**.
- 5 Select **Yes**.

To delete all files,

- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **Delete** → **All** → **Yes**.

### Copying files to the memory card

You can copy files from the internal memory to a memory card.

- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **Copy to Card**.
- 3 Select **Yes** to copy files.

## Viewing photos


Zoom in on part of a photo or view photos in a slide show.

### Enlarging a photo



In Playback mode, rotate **[Zoom]** right to enlarge a photo. Rotate **[Zoom]** left to reduce a photo.

The enlarged area and zoom ratio are indicated on the top of the screen. The maximum zoom ratio may vary depending on the resolution.

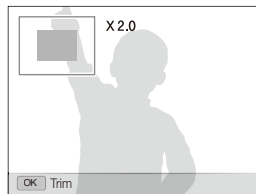


To	Do this
Move the enlarged area	Press <b>[DISP]</b> ,  ,  , or <b>[ISO]</b> .
Trim the enlarged photo	Press <b>[OK]</b> . It will be saved as a new file.



When you view imported photos on your camera, images may enlarge at different ratios.

### Starting a slide show

You can apply effects and audio to your slide show.

- 1 In Playback mode, press **[MENU]**.
- 2 Select .
- 3 Select a slide show effect option.
  - Skip to step 5 to start a slide show with no effects.

Option	Description
Images	Set the photos you want to view as a slide show.
	• <b>All:</b> View all photos in a slide show.
	• <b>Date:</b> View photos captured on a specific date in a slide show.
	• <b>Select:</b> View selected photos in a slide show.
Interval	• Set the interval between photos.
	• This is available when <b>Off</b> is selected in the effect option.
Effect	• Select a transition effect.
	• Select <b>Off</b> for no effects.
Music	Select a background audio.

- 4 Set the slide show effect.

- 5 Select **Start** → **Play**.

- To loop the slide show, select **Repeat**.
- Press **[OK]** to pause or resume the slide show.




To stop the slide show and switch to Playback mode, press **[OK]**, and then **[⚡]** or **[ISO]**.

### Playing a video

You can play a video, capture an image from a video, or crop a video.

- 1 In Playback mode, select a video and press **[OK]**.

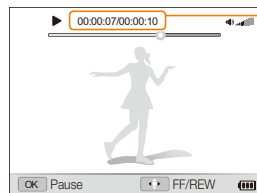

Playback time/  
Total playback time

## 2 Use the following buttons to control playback.

Press	To
[⏮]	Scan backward. The camera scans backward in 2X, 4X, and 8X increments when you press [⏮].
[OK]	Pause or resume playback.
[ISO]	Scan forward. The camera scans forward in 2X, 4X, and 8X increments when you press [ISO].
[Zoom] left or right	Adjust the volume level.

### Playing high-speed videos

In Playback mode, select a video files recorded at 1000 FPS, 480 FPS or 240 FPS and press **[OK]**.

- High-speed videos will be played in slow motion at 30 FPS, regardless of the frame rate of the video.

### Using bookmarks

Captured photos will work as bookmarks to jump to that point in the video. When you select an image on the video screen, the camera plays the video from the selected scene.

- 1 In Playback mode, select a video file that contains still images captured while recording a video.
- 2 Rotate **[Zoom]** right to select a scene and press **[OK]**.
  - The video file will play back from the scene you have selected.



Bookmarks will be retained even if you delete the captured images or change the file name.

### Trimming a video during playback

- 1 Press **[OK]** at the point where you want the new video to begin, and rotate **[Zoom]** right.
- 2 Press **[OK]** to resume playback.
- 3 Press **[OK]** at the point where you want the new video to end, and rotate **[Zoom]** right.
- 4 Select **Yes**.



- The original video should be at least 10 seconds long.
- The edited video is saved as a new file.

### Capturing an image during playback

- 1 Press **[OK]** at the point where you want to save a still image.
- 2 Press **[V]**.



- A captured image has the same resolution as the original video file and is saved as a new file.


## Playing voice memos

### Playing a voice memo

- 1 In Playback mode, select a voice memo and press **[OK]**.
- 2 Use the following buttons to control playback.

Press	To
<b>[↶]</b>	Scan backward.
<b>[OK]</b>	Pause or resume playback.
<b>[ISO]</b>	Scan forward.
<b>[⏏]</b>	Stop playback.
<b>[Zoom] left or right</b>	Adjust the volume level.

### Adding a voice memo to a photo

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Voice Memo** → **On**.
- 3 Press **[Shutter]** to record a short voice memo (10 seconds maximum).
  - Press **[Shutter]** to stop recording a voice memo.



### Playing a voice memo added to a photo


- In Playback mode, select a photo that includes a voice memo, and then press **[OK]**.
- Press **[OK]** to pause or resume playback.

# Editing a photo

Perform photo editing tasks, such as resizing, rotating, eliminating red-eyes, and adjusting brightness, contrast, or saturation.


## Resizing photos


- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Resize** → an option.
  - Select  to save the photo as a start image. (p. 110)

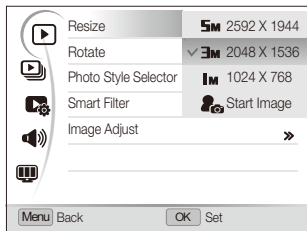

Available options differ depending on the size of the selected photo.

## Rotating a photo

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Rotate** → an option.

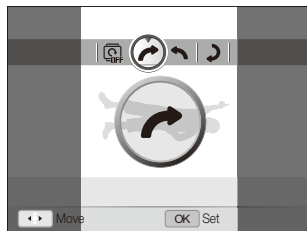

The rotated photo will be saved as the same file, not a new file.

## Applying photo styles

Apply a different photo style to the photo, such as Soft, Vivid, or Forest. The edited photo will be saved as a new file but it could be resized to a lower resolution.



Soft




Vivid




Forest

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select **[ ]** → **Photo Style Selector** → an option.
  - If you select **Custom RGB**, you can define your own RGB tone and photo style.

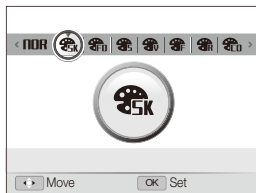

## Defining your own RGB tone

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select **[ ]** → **Photo Style Selector**.
- 3 Scroll to **Custom RGB**.
- 4 Rotate **[Zoom]** right.
- 5 Select a color (R: Red, G: Green, B: Blue).

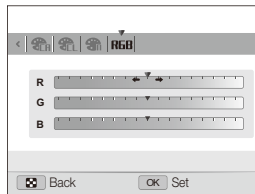

- 6 Adjust the amount of the selected color.  
(-: less or +: more)

## Applying smart filter effects

Apply various filter effects to your photos to create unique images. The edited photo will be saved as a new file but it could be resized to a lower resolution.




Miniature




Vignetting



Fish-eye


- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Smart Filter**.
- 3 Select an effect.

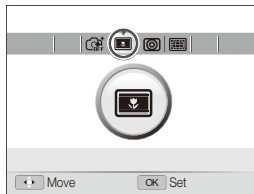


## Correcting exposure problems

Remove red-eye; hide facial imperfections; adjust brightness, contrast, or saturation; or add noise to the photo. The edited photo will be saved as a new file but it could be resized to a lower resolution.


### Removing red-eye




- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Image Adjust** → **Red-eye Fix**.

### Hiding facial imperfections

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Image Adjust** → **Face Retouch**.
- 3 Rotate **[Zoom]** right.
- 4 Select a level.
  - As the number increases, the face becomes clearer.
- 5 Press **[OK]** to save your settings.


### Adjusting brightness/contrast/saturation

- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Image Adjust**.
- 3 Select an adjustment option.

Option	Description
	Brightness
	Contrast
	Saturation

- 4 Rotate **[Zoom]** right.
- 5 Select a value to adjust the selected item.  
(-: less or +: more)
- 6 Press **[OK]** to save your settings.

### Adding noise to the photo


- 1 In Playback mode, select a photo and press **[MENU]**.
- 2 Select  → **Image Adjust** → **Add Noise**.

## Creating a print order (DPOF)


Select photos to be printed and set options, such as number of copies or paper size. Because the customized options are saved in the MISC folder of the memory card, you can print photos conveniently by taking only the memory card to a print shop without your camera.



- The memory card can be taken to a print shop that supports DPOF (Digital Print Order Format) or you can print photos directly through a DPOF-compatible printer at home.
- Wide photos may print with the left and right edges cut off, so be aware of the dimensions of your photos.
- You cannot set the DPOF for the photos stored in the internal memory.

- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **DPOF** → **Standard** → an option.

Option	Description
<b>Select</b>	Print the selected photos.
<b>All</b>	Print all photos.
<b>Reset</b>	Reset your settings.

- 3 If you select **Select**, scroll to a photo and rotate **[Zoom]** left or right to select the number of copies. Repeat for the photos you want, and then press **[Fn]**.
  - If you select **All**, press **[DISP]** or  to select the number of copies, and then press **[OK]**.


- 4 Press **[MENU]**.

- 5 Select  → **DPOF** → **Size** → an option.

Option	Description
<b>Select</b>	Specify the print size for the selected photo.
<b>All</b>	Specify the print size for all photos.
<b>Reset</b>	Reset your settings.

- 6 If you select **Select**, scroll to a photo and rotate **[Zoom]** left or right to select the print size. Repeat for the photos you want, and then press **[Fn]**.
  - If you select **All**, press **[DISP]** or  to select the print size, and then press **[OK]**.

### Printing photos as thumbnails


- 1 In Playback mode, press **[MENU]**.
- 2 Select  → **DPOF** → **Index** → **Yes**.




If you specify the print size, you can print photos only with DPOF 1.1-compatible printers.

# Viewing files on a TV or HDTV

Play back photos or videos by connecting your camera to a TV using the A/V cable.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select  → **Video Out**.
- 3 Select a video signal output according to your country or region. (p. 112)
- 4 Turn off your camera and TV.
- 5 Connect your camera to your TV using the A/V cable.

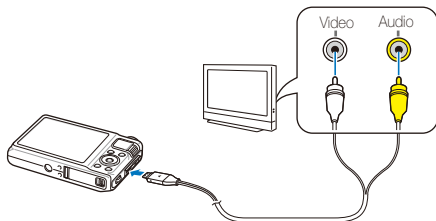


- 6 Turn on your TV and select the video output mode using the TV remote control.
- 7 Turn on your camera and press **[▶]**.
- 8 View photos or play videos using the buttons on your camera.




- On some TVs, digital noise may occur or part of an image may not appear.
- Images may not appear centered on the TV screen depending on your TV settings.
- Some shooting modes are not available while the camera is connected to a TV.

### Viewing files on an HDTV

You can view high-quality and uncompressed photos or videos on an HDTV using the optional HDMI cable. HDMI (High Definition Multimedia Interface) is supported by most HDTVs.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select  → **HDMI Size**.
- 3 Select an HDMI resolution. (p. 113)
- 4 Turn off your camera and HDTV.
- 5 Connect your camera to your HDTV using the optional HDMI cable.

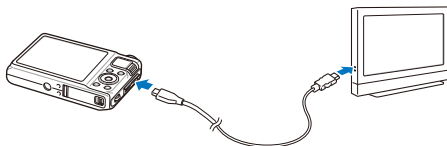

- 6 Turn on your camera.
  - If you turn Anynet+ off, the HDTV does not turn on automatically.
- 7 View files using the buttons on your camera or the remote control of your HDTV.



- If your HDTV supports the Anynet+(CEC) profile, turn the Anynet+ on in the settings menu (p. 113) to control all connected Samsung A/V devices with the TV remote control.
- Connection time to a HDTV may vary with the type of SD card used. A faster SD card will not necessarily result in a faster HDMI transfer, due to the main function of the card is to improve transfer rate during shooting.

# Transferring files to your computer (for Windows)

Transfer files to your computer using the built-in Intelli-studio program. You can also edit files or upload files to your favorite websites.

## Requirements

Item	Requirements
CPU	Intel® Core 2 Dual® 1.66 GHz or higher/ AMD Athlon™ X 2 Dual-Core 2.2 GHz or higher
RAM	Minimum 512 MB RAM (1 GB and above recommended)
OS	Windows XP SP2/Vista/7
Hard disk capacity	250 MB or more (1 GB or more recommended)
Others	<ul style="list-style-type: none"><li>• CD-ROM drive</li><li>• nVIDIA Geforce 7600GT or higher/ ATI X1600 series or higher</li><li>• 1024 x 768 pixels, 16-bit color display compatible monitor (1280 x 1024 pixels, 32-bit color display recommended)</li><li>• USB 2.0 port, Microsoft DirectX 9.0c or later</li></ul>



- Intelli-studio may not perform correctly on some computers, even when the computer meets the requirements.
- If your computer does not meet the requirements, videos may not play correctly or it may take longer to edit videos.
- Install DirectX 9.0c or above before you use the program.
- You must use Windows XP/Vista/7 or Mac OS 10.4 or later to connect the camera as a removable disk.




- Using a self-assembled PC or a PC and OS that are not supported may void your warranty.
- The programs may not work properly on 64-bit Edition of Windows XP, Vista, and 7.

## Transferring files using Intelli-studio

Intelli-studio starts automatically when you connect the camera to your computer with the USB cable.




The battery charges while the camera is connected to a computer with the USB cable.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select  → **PC Software** → **On**.
- 3 Turn off the camera.
- 4 Connect the camera to your computer with the USB cable.



You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

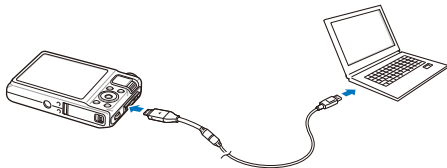

### 5 Turn on the camera.

- The computer recognizes the camera automatically.



If you set the USB option to **Select Mode**, select **Computer** from the pop-up window.

### 6 Select a folder on your computer to save new files to.

- If your camera has no new files, the pop-up window for saving new files will not appear.

### 7 Select **Yes**.

- New files are transferred to the computer.




For Windows Vista and Windows 7, select **Run iStudio.exe** from the AutoPlay window.

### Using Intelli-studio

Intelli-studio is a built-in program that allows you to play back and edit files. You can also upload files to websites, such as Flickr or YouTube. For details, select **Help** → **Help** in the program.



- If you install Intelli-studio on your computer, the program launches more quickly. To install the program, select **Tool** → **Install Intelli-studio on PC**.
- You cannot edit files directly on the camera. Transfer files to a folder on your computer before editing.
- You cannot copy files in your computer to the camera.
- Intelli-studio supports the following formats:
  - Videos: MP4 (Video: H.264, Audio: AAC), WMV (WMV 7/8/9), AVI (MJPEG)
  - Photos: JPG, GIF, BMP, PNG, TIFF
- You cannot open the RAW format files with the Intelli-studio program.

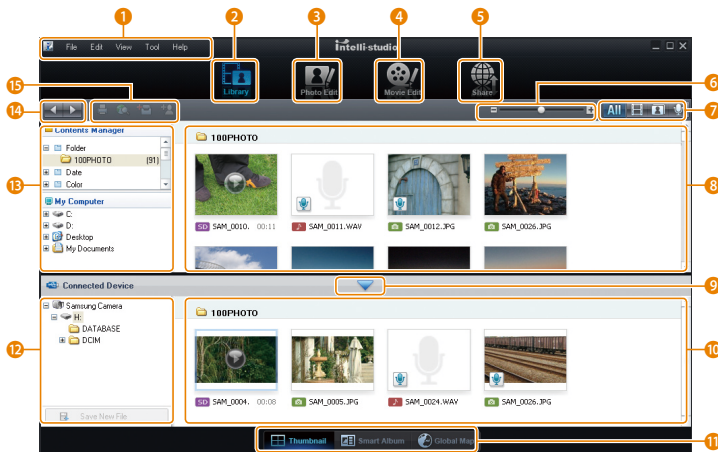

Number	Description
1	Open menus.
2	Display files in the selected folder.
3	Change to the Photo edit mode.
4	Change to the Video edit mode.
5	Change to the Sharing mode. (You can send files by email or upload files to websites, such as Flickr or YouTube.)
6	Enlarge or reduce the thumbnails in the list.
7	Select a file type.
8	View files of the selected folder on your computer.
9	Show or hide files of the connected camera.
10	View files of the selected folder on the camera.
11	View files as thumbnails, in Smart Album, or on a map.
12	Browse folders in the connected device.
13	Browse folders in your computer.
14	Move to the previous or next folder.
15	Print files, view files on a map, store files in My Folder, or register faces.


## Transferring files by connecting the camera as a removable disk

You can connect the camera to your computer as a removable disk.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **⚙️ → PC Software → Off**.
- 3 Turn off the camera.
- 4 Connect the camera to your computer with the USB cable.



You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

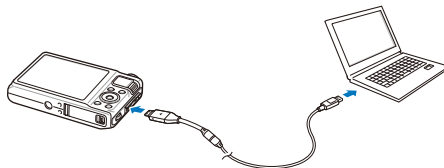

5 Turn on the camera.

- The computer recognizes the camera automatically.




If you set the USB option to **Select Mode**, select **Computer** from the pop-up window.

6 On your computer, select **My Computer** → **Removable Disk** → **DCIM** → **100PHOTO**.

7 Select the files you want and drag or save them to your computer.

## Disconnecting the camera (for Windows XP)

The way to disconnect the USB cable for Windows Vista and Windows 7 is similar.

- 1 If the status lamp on your camera is blinking, wait until it stops.
- 2 Click  on the tool bar at the bottom right of your PC screen.



- 3 Click the pop-up message.
- 4 Remove the USB cable.



The camera cannot be removed safely when Intelli-studio is running. End the program before disconnecting the camera.

# Transferring files to your computer (for Mac)

When you connect the camera to a Macintosh computer, the computer recognizes the camera automatically. You can transfer files directly from the camera to the computer without installing any programs.




Mac OS 10.4 or later is supported.

- 1 Connect your camera to a Macintosh computer with the USB cable.



You must plug the end of the cable with the indicator light (▲) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

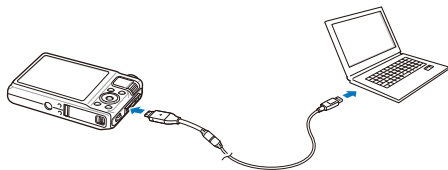

- 2 Turn on the camera.

- The computer recognizes the camera automatically and a removable disk icon is displayed.



If you set the USB option to **Select Mode**, select **Computer** from the pop-up window.

- 3 Double-click the removable disk icon.
- 4 Transfer photos or videos to the computer.

# Using Samsung RAW Converter

Photos captured by a camera are often transformed to jpeg formats and stored in the memory according to the settings of the camera at the time of shooting. RAW files are not transformed to jpeg formats and are stored in the memory without any changes. With Samsung RAW Converter, you can calibrate exposures, white balances, tones, contrasts, and colors of photos.



- You can download the Samsung RAW Converter program for Macintosh from the Samsung website.
- The Samsung RAW Converter program supplied on the CD-ROM is compatible only with Windows XP and Vista.

## Installing Samsung RAW Converter

- 1 Insert the installation CD in a compatible CD-ROM drive.
- 2 When the setup screen is displayed, click **Samsung Digital Camera Installer** to start installation.




- 3 Select **Samsung RAW Converter** from the program selection screen, and then click **Install**.
- 4 Follow the on-screen instructions to install Samsung RAW Converter.
- 5 When the installation is complete, click **Exit**.

## Opening Samsung RAW Converter

On your computer, select **Start** → **All Programs** → **Samsung RAW Converter** → **Samsung RAW Converter**.

## Using the Samsung RAW Converter Interface

For details about using Samsung RAW Converter, click **Help** → **Open software manual**.

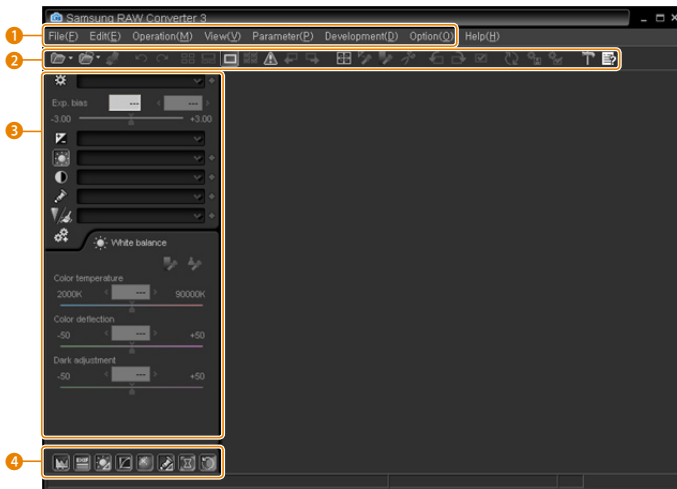


Number	Description
1	Menu
2	Toolbar



Number	Description
3	Editing tools
4	Open/Close the fine adjustment window for the editing tools

## Editing RAW format files

If you edit the RAW format files with the Samsung RAW Converter, you can maintain high image quality. You can also edit JPEG and TIFF format files.

### To adjust the exposure of of an image

- 1 Select **File** → **Open file** and open a file.
- 2 From the editing tools, select .
- 3 Adjust the exposure with the scroll bar.

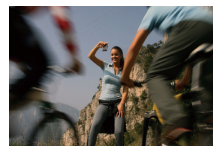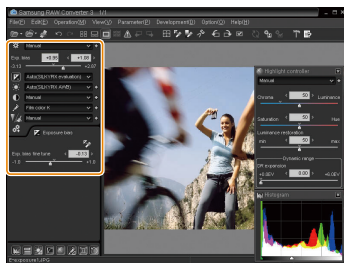


Original image  
**P** Mode, Aperture: f=8,  
Shutter Speed: 1/15 sec,  
ISO=100




Changed image after  
correcting the exposure

- You can view the brightness of the image from the histogram window.

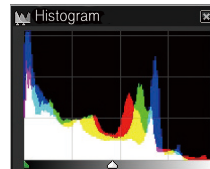


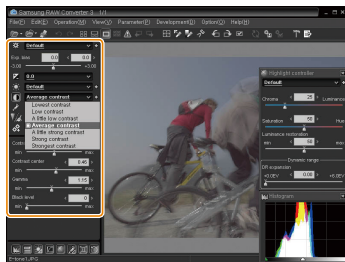
Original image

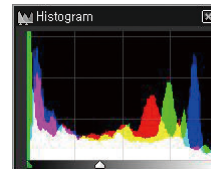

Changed image after  
correcting the exposure

### To adjust the tone of an image

- 1 Select **File** → **Open file** and open a file.
- 2 From the editing tools, select .
- 3 Adjust the tone with the scroll bar.




Original image  
P Mode, Aperture: f=8,  
Shutter Speed: 1/15 sec,  
ISO=100



Changed image after  
correcting the contrast


### Saving RAW files as JPEG/TIFF formats


- 1 Select **File** → **Open file** and open a file.
- 2 Select **File** → **Development**.
- 3 Select a file format (JPEG or TIFF) and select **Save**.

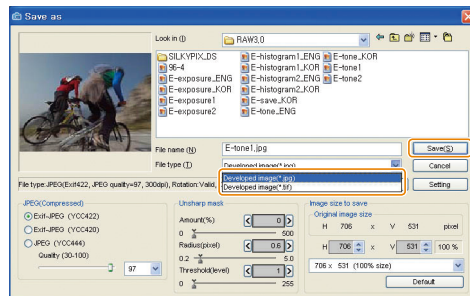



# Printing photos with a photo printer (PictBridge)


Print photos with a PictBridge-compatible printer by connecting your camera directly to the printer.

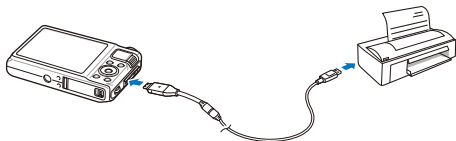- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select  → **USB**.
- 3 Select **Printer**.
- 4 With the printer on, connect your camera to the printer with the USB cable.



- 5 Turn on your camera.
  - The printer recognizes the camera automatically.
- 6 Press  or **[ISO]** to select a photo.
  - Press **[MENU]** to set printing options. See "Configuring print settings."
- 7 Press **[OK]** to print.
  - Printing starts. Press  to cancel printing.

## Configuring print settings

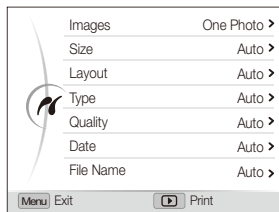

Option	Description
Images	Select whether to print the current photo or all photos.
Size	Specify the size of the print.
Layout	Create thumbnail prints.
Type	Select the type of paper.
Quality	Set the printing quality.
Date	Set to print the date.
File Name	Set to print the name of the file.
Reset	Reset the print options.



Some options are not supported by some printers.

# Appendixes

Refer to settings, error messages, specifications, and maintenance tips.


<b>Camera settings menu</b>	109
Accessing the settings menu	109
Sound	110
Display	110
Settings	111
<b>Error messages</b>	114
<b>Camera maintenance</b>	115
Cleaning your camera	115
About memory cards	116
About the battery	117
<b>Before contacting a service center</b>	121
<b>Camera specifications</b>	124
<b>FCC notice</b>	128
<b>Index</b>	129




# Camera settings menu

Learn about various options that configure your camera's settings.


## Accessing the settings menu

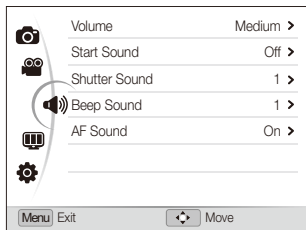- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select a menu.



Menu	Description
	<b>Sound:</b> Set various camera sounds and the volume. (p. 110)
	<b>Display:</b> Customize the display settings, such as brightness. (p. 110)
	<b>Settings:</b> Change the settings for the camera system, such as memory format, default file name, and USB mode. (p. 111)

- 3 Select an option and save your settings.

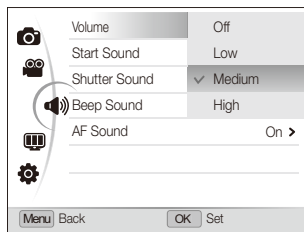

- 4 Press **[MENU]** to return to the previous screen.



## Sound



\* Default

Item	Description
Volume	Adjust the volume of any sound. (Off, Low, Medium*, High)
Start Sound	Select a sound to be emitted when you turn on your camera. (Off*, 1, 2, 3)
Shutter Sound	Select a sound to be emitted when you press the shutter button. (Off, 1*, 2, 3)
Beep Sound	Select a sound to be emitted when you press the buttons or switching modes. (Off, 1*, 2, 3)
AF Sound	Set a sound to be emitted when you half-press the shutter button. (Off, On*)


## Display

\* Default


Item	Description
Function Description	Display a brief description of an option or menu. (Off, On*)
Grid Line	Select a guide to help you compose a scene. (Off*, 3 X 3, 2 X 2, +, X)
Start Image	Set a start image to display when the camera turns on. <ul style="list-style-type: none"> <li>• <b>Off*</b>: Display no start image.</li> <li>• <b>Logo</b>: Display a default image stored in the internal memory.</li> <li>• <b>User Image</b>: Display the image you want. (p. 90)                <ul style="list-style-type: none"> <li>• Only one start image can be saved in the internal memory.</li> <li>• If you select a new photo as a start image or reset your camera, the current image is deleted.</li> </ul> </li> </ul>
Display Brightness	Adjust the brightness of the screen. (Auto*, Dark, Normal, Bright)  <b>Normal</b> is fixed in Playback mode even if <b>Auto</b> is selected.

* Default	
Item	Description
Quick View	<p>Set the duration for reviewing a captured image before returning to Shooting mode. (Off, 0.5 sec*, 1 sec, 3 sec)</p> <p> The camera always displays photos captured in the High-speed burst mode before returning to Shooting mode.</p>
Power Save	<p>If you perform no operations for 30 seconds, the camera automatically switches to Power save mode. (Off*, On)</p> <p> Press any button to deactivate the Power save mode.</p>



## Settings

* Default	
Item	Description
Format	<p>Format the internal memory and the memory card. All files-including the protected files-are deleted. (No, Yes)</p> <p> If you use a memory card used with cameras from other manufacturers or a memory card reader, or one formatted on a computer, your camera may read the card incorrectly. Format the card before using it.</p>
Reset	<p>Reset menus and shooting options. Date and time, language, and video output settings are not reset. (No, Yes)</p>
Language	<p>Select a language for the display text.</p>
Time Zone	<p>Select regions for the home time zone and the visit time zone.</p> <ul style="list-style-type: none"> <li>• <b>Home:</b> Set the time zone of your home country. Use this option when you reset the camera or when you return to your home country from another time zone.</li> <li>• <b>Visit:</b> If you are visiting a different time zone, use this option to set the time zone as a secondary clock. The secondary clock calculates the time in the current time zone based on your home time zone.</li> </ul>


\* Default

Item	Description
Date & Time	Set the date and time and select a date format. (Off*, dd/mm/yyyy, mm/dd/yyyy, yyyy/mm/dd)
File No.	Specify how to name files. <ul style="list-style-type: none"> <li>• <b>Reset</b>: Set the file number to start from 0001 after inserting a new memory card, formatting a memory card, or deleting all files.</li> <li>• <b>Series*</b>: Set the file number to follow the previous file number after inserting a new memory card, formatting a memory card, or deleting all files.</li> </ul>
	 <ul style="list-style-type: none"> <li>• The default name of the first folder is 100PHOTO and the default name of the first file is SAM_0001.</li> <li>• The file number increases one at a time from SAM_0001 to SAM_9999. (1000 files can be stored in one folder.)</li> <li>• The folder number increases one at a time from 100PHOTO to 999PHOTO.</li> <li>• The maximum number of files that can be stored in one folder is 1000.</li> <li>• The camera defines file names according to the Digital rule for Camera File system (DCF) standard. If you change the names of files intentionally, the camera may not play back the files.</li> </ul>

\* Default

Item	Description
Imprint	Set whether to print the date and time on your photos when printing. (Off*, Date, Date & Time)  <ul style="list-style-type: none"> <li>• The date and time will be displayed on the bottom-right corner of the photo in yellow.</li> <li>• The date and time may not be printed on some printer models.</li> <li>• If you select <b>Text</b> in the <b>SCN</b> mode, the date and time is not printed.</li> </ul>
Auto Power Off	Set the camera to automatically turn off when you are not using it. (Off, 1 min, 3 min*, 5 min, 10 min)  <ul style="list-style-type: none"> <li>• Your settings will not change after you replace the battery.</li> <li>• The camera will not automatically turn off when: <ul style="list-style-type: none"> <li>- It is connected to a computer or printer.</li> <li>- You are playing a slide show or videos.</li> <li>- You are recording a voice memo.</li> </ul> </li> </ul>
Video Out	Set the video signal output according to your region. <ul style="list-style-type: none"> <li>• <b>NTSC*</b>: USA, Canada, Japan, Korea, Taiwan, Mexico.</li> <li>• <b>PAL</b> (supports only BDGHI): Australia, Austria, Belgium, China, Denmark, Finland, Germany, England, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway.</li> </ul>

\* Default

 
Item	Description
AF Lamp	Set an assistant light to help you focus in dark places. (Off, On*)
Anynet+ (HDMI-CEC)	Set to control the camera connected to a Samsung HDTV that supports Anynet+(CEC) with the TV remote control. <ul style="list-style-type: none"> <li>• <b>Off</b>: View files without using an HDTV remote control.</li> <li>• <b>On*</b>: Control the camera with an HDTV remote control.</li> </ul>
HDMI Size	Select the resolution of photos when playing back files on an HDTV with the HDMI cable. (NTSC: <b>1080i*</b> , <b>720p</b> , <b>480p</b> / PAL: <b>1080i*</b> , <b>720p</b> , <b>576p</b> )  <ul style="list-style-type: none"> <li>• If the HDTV does not support the selected resolution, the HDTV automatically selects the next lower resolution.</li> <li>• If you select <b>480p</b> or <b>576p</b>, the playback menus and Smart Album are not available when the camera is connected to a TV.</li> </ul>

\* Default

Item	Description
USB	Set the function the camera uses when it is connected to a computer or printer via a USB cable. <ul style="list-style-type: none"> <li>• <b>Select Mode*</b>: Select a USB mode when you connect your camera to another device.</li> <li>• <b>Computer</b>: Connect your camera to a computer for transferring files.</li> <li>• <b>Printer</b>: Connect your camera to a printer for printing files.</li> </ul>
PC Software	Set Intelli-studio to start automatically when you connect your camera to your computer. ( <b>Off*</b> , <b>On</b> )

# Error messages

When the following error messages appear, try these remedies.


Error message	Suggested remedies
Card Error	<ul style="list-style-type: none"><li>• Turn off your camera and then turn it on again.</li><li>• Remove your memory card and insert it again.</li><li>• Format your memory card. (p. 111)</li></ul>
Card Locked	Unlock the memory card. 
Card not supported.	The inserted memory card is not compatible with your camera. Insert an SD or SDHC memory card.
DCF Full Error	File names do not match the DCF standard. Transfer the files on the memory card to your computer and format the card. (p. 111)
File Error	Delete the damaged file or contact a service center.
File system not supported.	Your camera does not support the FAT file structure of the inserted memory card. Format the memory card on the camera.
Low Battery	Insert a charged battery or recharge the battery.
Memory Full	Delete unnecessary files or insert a new memory card.
No Image File	Take photos or insert a memory card that has some photos.

# Camera maintenance

## Cleaning your camera


### Camera lens and display

Use a blower brush to remove dust and wipe the lens gently with a soft cloth. If any dust remains, apply lens cleaning liquid to a piece of cleaning paper and wipe gently.

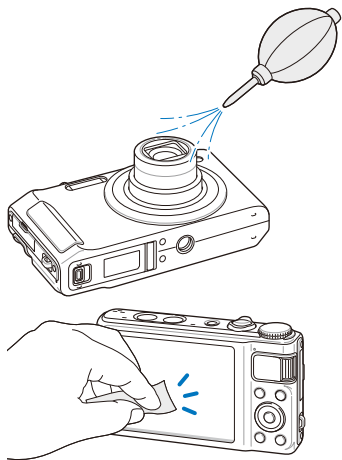

### Camera body

Wipe gently with a soft, dry cloth.

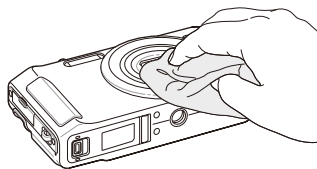


- Never use benzene, thinners, or alcohol to clean the device. These solutions can damage the camera or cause it to malfunction.
- Do not press on the lens cover or use a blower brush on the lens cover.

## About memory cards

### Memory cards you can use

You can use SD (Secure Digital) or SDHC (Secure Digital High Capacity) memory cards.

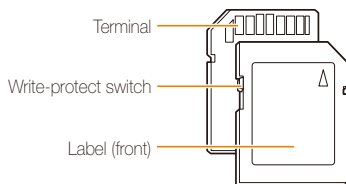

You can prevent files from being deleted by using a write-protect switch on the SD or SDHC card. Slide the switch down to lock or slide it up to unlock. Unlock the card when shooting.

### Memory card capacity

The memory capacity may differ depending on shooting scenes or shooting conditions. These capacities are based on a 1 GB SD card:

	Size	Super Fine	Fine	Normal	RAW	RAW + S.Fine	RAW + Fine	RAW + Normal
P h o t o s	10M	180	328	451	41	31	37	39
	9M	201	363	497	42	32	37	40
	8M	220	392	531	42	33	38	40
	7M	235	420	568	42	34	38	40
	6M	235	419	568	42	34	38	40
	5M	319	542	707	43	36	40	42
	3M	471	746	928	44	39	42	43
	2M	645	967	1,161	45	41	43	44
	1M	1,056	1,331	1,458	46	43	44	44

Size	1000 FPS	480 FPS	240 FPS	30 FPS
<b>1920</b> <b>1080</b>	-	-	-	Approx. 6' 28"
<b>1920</b>	-	-	-	Approx. 7' 11"
<b>1280</b>	-	-	-	Approx. 12' 3"
<b>640</b>	-	-	-	Approx. 26' 15"
<b>320</b>	-	-	-	Approx. 69' 57"
<b>432</b>	-	-	Approx. 8' 20"	-
<b>224</b>	-	Approx. 6' 3"	-	-
<b>192</b>	Approx. 8' 20"	-	-	-

\* Videos

\* The recordable time may vary if you use the zoom.  
Several videos were recorded in succession to determine the total recording time.

## About the battery

Use only Samsung-approved batteries.

### Battery specifications

Mode	SLB-11A
Type	Lithium-ion battery
Cell capacity	1,130 mAh
Voltage	3.8 V
Charging time* (when the camera is switched off)	Approx. 190 min

\* Charging the battery by attaching the USB cable to a PC and your camera may take longer.

### Battery life

Shooting time / Number of photos		Shooting conditions (when the battery is fully charged)
Photos	Approx. 110 min/ Approx. 220 shots	<p>This is measured under the following conditions: in the <b>P</b> mode, 10M resolution, Fine quality, OIS on.</p> <ol style="list-style-type: none"> <li>1. Set the flash option to <b>Fill in</b>, zoom in or out, and take a single shot.</li> <li>2. Set the flash option to <b>Off</b>, zoom in or out, and take a single shot.</li> <li>3. Perform steps 1 and 2 for 30 seconds and repeat for 5 minutes. Then turn off the camera for 1 minute.</li> <li>4. Repeat steps 1 to 3.</li> </ol>
Videos	Approx. 90 min	Record videos at 1920 X 1080 HQ resolution and 30 FPS.

- The figures above are based on Samsung's test standards. Your results may differ depending on your actual usage.
- Several videos were recorded in succession to determine the total recording time.

### Notes about charging the battery

- If the indicator light is off, make sure that the battery is inserted correctly.
- Do not use your camera when charging. Turn off the camera before charging the battery.
- Turn on your camera after charging the battery for more than 10 minutes.
- Using the flash or recording videos depletes the battery quickly. Charge the battery until the indicator light turns green.
- If the indicator light blinks in orange or does not illuminate, reconnect the cable, or remove the battery and insert it again.
- If you charge the battery when the cable is overheated or the temperature is too high, the indicator light may turn orange. Charging will start when the battery cools down.
- Do not pull a power supply cord to disconnect the plug from the power outlet. This may cause a fire or electric shock.

#### **Notes about charging with a computer connected**

- Use only the provided USB cable.
- The battery may not be charged when:
  - You use a USB hub.
  - Other USB devices are connected to your computer.
  - You connect the cable to the port on the front side of your computer.
  - The USB port of your computer does not support the power output standard (5 V, 500 mA).



**Personal injury or death can occur if the battery is handled carelessly or improperly. For your safety, follow these instructions for proper battery handling:**

- The battery can ignite or explode if not handled properly. If you notice any deformities, cracks, or other abnormalities in the battery, immediately discontinue use of the battery and contact your manufacturer.
- Use only authentic, manufacturer-recommended battery chargers and adapters and charge the battery only by the method described in this user manual.
- Do not place the battery near heating devices or expose to excessively warm environments, such as the inside of an enclosed car in the summertime.
- Do not place the battery in a microwave oven.
- Avoid storing or using the battery in hot, humid places, such as spas or shower enclosures.
- Do not rest the device on flammable surfaces, such as bedding, carpets, or electric blankets for a prolonged period.
- When the device is switched on, do not leave it in any confined space for a prolonged period.
- Do not allow battery terminals to come in contact with metallic objects, such as necklaces, coins, keys, or watches.
- Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries.

- Do not disassemble the battery or puncture the battery with any sharp object.
- Avoid exposing the battery to high pressure or crushing forces.
- Avoid exposing the battery to major impacts, such as dropping it from high places.
- Do not expose the battery to temperatures of 60° C (140° F) or above.
- Do not allow the battery to come in contact with moisture or liquids.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**Disposal guidelines**

- Dispose of the battery with care.
- Do not dispose of the battery in a fire.
- Disposal regulations may differ by country or region. Dispose of the battery in accordance with all local and federal regulations.



**Guidelines for charging the battery**

Charge the battery only by the method described in this user manual. The battery can ignite or explode if not charged properly.

# Before contacting a service center

If you are having trouble with your camera, try these troubleshooting procedures before contacting a service center. If you have attempted the troubleshooting solution and are still having problems with your device, contact your local dealer or service center.

Situation	Suggested remedies
Cannot turn on the camera	<ul style="list-style-type: none"><li>• Make sure that the battery is inserted.</li><li>• Make sure that the battery is inserted correctly.</li><li>• Charge the battery.</li></ul>
The power turns off suddenly	<ul style="list-style-type: none"><li>• Charge the battery.</li><li>• Your camera may be in Power save mode. (p. 111)</li><li>• The camera may turn off to prevent the memory card from being damaged due to an impact. Turn on your camera again.</li></ul>
The camera is losing battery power quickly	<ul style="list-style-type: none"><li>• The battery may lose power more quickly in low temperatures (below 0° C). Keep the battery warm by putting it into your pocket.</li><li>• Using the flash or recording videos depletes the battery quickly. Recharge if needed.</li><li>• Batteries are consumable parts that must be replaced over time. Get a new battery if the battery life is diminishing quickly.</li></ul>

Situation	Suggested remedies
Cannot take photos	<ul style="list-style-type: none"><li>• There is no space on the memory card. Delete unnecessary files or insert a new card.</li><li>• Format the memory card. (p. 111)</li><li>• The memory card is defective. Get a new memory card.</li><li>• The memory card is locked. Unlock the card. (p. 116)</li><li>• Make sure that the camera is switched on.</li><li>• Charge the battery.</li><li>• Make sure that the battery is inserted correctly.</li></ul>
The camera freezes	Remove the battery and insert it again.
The flash does not work	<ul style="list-style-type: none"><li>• The flash option may be set to <b>Off</b>. (p. 59)</li><li>• You cannot use the flash in the  <b>DUAL</b>, , or some <b>SCN</b> modes.</li></ul>

Situation	Suggested remedies
<b>The flash fires unexpectedly</b>	The flash may fire due to static electricity. This is not a malfunction of the camera.
<b>The date and time are incorrect</b>	Set the date and time in the display settings menu. (p. 112)
<b>The display or buttons do not work</b>	Remove the battery and insert it again.
<b>The camera screen works poorly</b>	If you use your camera at low temperatures, it will cause the camera screen to malfunction or discolor. For better performance of your camera screen, use your camera at normal temperatures.
<b>The memory card has an error</b>	The memory card has not been formatted. Format the card. (p. 111)
<b>Cannot play back files</b>	If you change the name of a file, your camera may not play the file (the name of the file should meet the DCF standard). If you encounter this situation, play back files on your computer.

Situation	Suggested remedies
<b>The photo is blurry</b>	<ul style="list-style-type: none"> <li>Make sure that the focus option you set is suitable for close-up shots. (p. 62)</li> <li>Make sure that the lens is clean. If not, clean the lens. (p. 115)</li> <li>Make sure that the subject is within range of the flash. (p. 124)</li> </ul>
<b>The colors in the photo do not match the actual scene</b>	An incorrect white balance can create unrealistic color. Select the proper white balance option to suit the light source. (p. 72)
<b>The photo is too bright</b>	<p>Your photo is overexposed.</p> <ul style="list-style-type: none"> <li>Adjust the aperture value or the shutter speed. (p. 42)</li> <li>Turn off the flash. (p. 59)</li> <li>Adjust the ISO speed. (p. 61)</li> <li>Adjust the exposure value. (p. 71)</li> </ul>
<b>The photo is too dark</b>	<p>Your photo is underexposed.</p> <ul style="list-style-type: none"> <li>Adjust the aperture value or the shutter speed. (p. 42)</li> <li>Turn on the flash. (p. 59)</li> <li>Adjust the ISO speed. (p. 61)</li> <li>Adjust the exposure value. (p. 71)</li> </ul>

Situation	Suggested remedies
The TV does not display your photos	<ul style="list-style-type: none"> <li>• Make sure that the camera is correctly connected to the external monitor with the A/V cable.</li> <li>• Make sure that your memory card contains photos.</li> </ul>
Your computer does not recognize your camera	<ul style="list-style-type: none"> <li>• Make sure that the USB cable is connected correctly.</li> <li>• Make sure that your camera is switched on.</li> <li>• Make sure that you are using a supported operating system.</li> </ul>
Your computer disconnects the camera while transferring files	The file transfer may be interrupted by static electricity. Disconnect the USB cable and connect it again.
Your computer cannot play videos	Depending on the video player programs, video files may not play. To play video files captured with your camera, install and use the Intelli-studio program on your computer. (p. 99)

Situation	Suggested remedies
Intelli-studio is not functioning properly	<ul style="list-style-type: none"> <li>• End Intelli-studio and restart the program.</li> <li>• You cannot use Intelli-studio on Macintosh computers.</li> <li>• Make sure that the <b>PC Software</b> is set to <b>On</b> in the settings menu. (p. 113)</li> <li>• Depending on your computer's specification and environments, the program may not launch automatically. In this case, click <b>Start</b> → <b>My Computer</b> → <b>Intelli-studio</b> → <b>iStudio. exe</b> on your computer.</li> </ul>
Cannot set the DPOF for RAW files	You cannot set the DPOF for RAW files.

# Camera specifications

Image sensor	
Type	1/2.4" (Approx. 7.59 mm) High Speed CMOS
Effective pixels	Approx. 10 mega-pixels
Total pixels	Approx. 10.6 mega-pixels
Lens	
Focal length	Schneider-KREUZNACH lens f = 4.3 - 21.5 mm (35 mm film equivalent: 24 - 120 mm)
F-stop range	F2.4 (W) - F5.8 (T)
Digital zoom	<ul style="list-style-type: none"> <li>Still image mode: 1.0X - 4.0X</li> <li>Play mode: 1.0X - 11.4X (depending on image size)</li> </ul>
Display	
Type	AMOLED
Feature	3.0" (7.62 cm) VGA
Focusing	
Type	TTL auto focus (Multi AF, Center AF, Selection AF, Manual Focus, Face Detection AF, Tracking AF), Movie AF (CAF)

Range		Wide (W)	Tele (T)
	Normal	50 cm - infinity	80 cm - infinity
	Macro	5 cm - 50 cm	50 cm - 80 cm
	Auto Macro	5 cm - infinity	50 cm - infinity
	Manual Focus	5 cm - infinity	50 cm - infinity
Shutter speed			
<ul style="list-style-type: none"> <li>Auto: 1/8 - 1/2,000 sec.</li> <li>Program: 1 - 1/2,000 sec.</li> <li>Manual: 16 - 1/2,000 sec.</li> <li>Night: 8 - 1/2,000 sec.</li> <li>Fireworks: 2 sec.</li> </ul>			
Exposure			
Control	Program AE, Manual Aperture Adjustment		
Metering	Multi, Spot, Center-weighted		
Compensation	±2EV (1/3EV steps)		
ISO equivalent	Auto, 80, 100, 200, 400, 800, 1600, 3200		

Flash	
Mode	Off, Auto, Red-eye, Fill in, Slow Sync, Red-eye Fix
Range	<ul style="list-style-type: none"> <li>Wide: 0.2 m - 4.4 m (ISO Auto)</li> <li>Tele: 0.8 m - 1.8 m (ISO Auto)</li> </ul>
EVC	±5EV (1/2 steps)
Recharging time	Approx. 4 sec. (depending on battery condition)
Shake reduction	
DUAL IS [Optical Image Stabilization (OIS) + Digital Image Stabilization (DIS)]	
Effect	
Shooting mode	<ul style="list-style-type: none"> <li>Photo Style Selector: Normal, Sketch, Defog, Soft, Vivid, Forest, Retro, Cool, Calm, Classic, Negative, Custom RGB</li> <li>Image Adjust: Sharpness, Contrast, Saturation</li> <li>Smart Filter: Normal, Miniature, Vignetting, Fish-eye</li> </ul>
White Balance	
Auto WB, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom Set, Color Temperature	
Date Imprinting	
Date & Time, Date, Off	

Shooting	
Photos	<ul style="list-style-type: none"> <li>Modes: Smart Auto (Macro, Macro Text, White, Landscape, Action, Tripod, Night, Night Portrait, Backlight, Backlight Portrait, Portrait, Macro Portrait, Macro Color, Fireworks, Blue Sky, Sunset, Natural Green), Program, Aperture Priority, Shutter Priority, Manual, DUAL IS, Scene (Panorama, Beauty Shot, Night, Portrait, Children, Landscape, Close Up, Text, Sunset, Dawn, Backlight, Fireworks, Beach &amp; Snow)</li> <li>Drive: Single, Interval, Precapture, Bracket, 10fps, 5fps, 3fps</li> <li>Timer: 10 Sec, 2 Sec</li> </ul>
Videos	<ul style="list-style-type: none"> <li>Modes: Smart Scene Detection (Landscape, Blue Sky, Natural Green, Sunset Sky), Movie</li> <li>Format: H.264 (MPEG-4, AVC) (Max recording time: 20 min)</li> <li>Size: 1920 X 1080 HQ, 1920 X 1080, 1280 X 720, 640 X 480, 320 X 240</li> <li>Frame Rate: 1000 FPS, 480 FPS, 240 FPS, 30 FPS</li> <li>Voice: Off, On, Zoom Mute</li> <li>OIS: On, Off</li> <li>Video editing (embedded): Pause during recording, Still image capture, Time trimming</li> </ul>











Frame rate available for each resolution		Resolution	Frame rate
	Wide (16:9)	1920 X 1080 HQ	30 FPS
		1920 X 1080	30 FPS
		1280 X 720	30 FPS
		192 X 64	1000 FPS
	Standard (4:3)	432 X 320	240 FPS
		224 X 160	480 FPS
		640 X 480	30 FPS
		320 X 240	30 FPS
<b>Playback</b>			
Type	Single image, Thumbnails, Multi slide show, Movie clip, Smart Album * Smart Album category: Type, Date, Color, Week, Face		
Edit	Resize, Rotate, Photo Style Selector, Image Adjust		
Effect	<ul style="list-style-type: none"> <li>Photo Style Selector: Normal, Sketch, Defog, Soft, Vivid, Forest, Retro, Cool, Calm, Classic, Negative, Custom RGB</li> <li>Image Adjust: Red-eye Fix, Face Retouch, Brightness, Contrast, Saturation, Add Noise</li> <li>Smart Filter: Normal, Miniature, Vignetting, Fish-eye</li> </ul>		

### Voice recording

- Voice Recording (Max 10 hours)
- Voice Memo in a photo (Max. 10 sec.)
- Stereo recording

### Storage

Media	<ul style="list-style-type: none"> <li>Internal memory: Approx. 22 MB</li> <li>External memory (Optional)                             <ul style="list-style-type: none"> <li>SD card (up to 4 GB guaranteed)</li> <li>SDHC card (up to 8 GB guaranteed)</li> </ul> </li> </ul> <p>Internal memory capacity may not match these specifications.</p>
File format	<ul style="list-style-type: none"> <li>Photo: JPEG (DCF), EXIF 2.21, DPOF 1.1, PictBridge 1.0</li> <li>Video: H.264 (MPEG-4.AVC)</li> <li>Audio: AAC</li> </ul>

Image size	For 1GB SD							
		Super Fine	Fine	Normal	RAW	RAW + S.Fine	RAW + Fine	RAW + Normal
		180	328	451	41	31	37	39
		201	363	497	42	32	37	40
		220	392	531	42	33	38	40
		235	420	568	42	34	38	40
		235	419	568	42	34	38	40
		319	542	707	43	36	40	42
		471	746	928	44	39	42	43
		645	967	1,161	45	41	43	44
		1,056	1,331	1,458	46	43	44	44
These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.								
Interface								
Digital output connector	USB 2.0							
Audio output	Mono (Internal speaker), Stereo (Microphone)							
Video output	<ul style="list-style-type: none"><li>• A/V: NTSC, PAL (selectable) SCC-AV20</li><li>• HDMI 1.4: NTSC, PAL (selectable)</li></ul>							
DC power input connector	20 pin, 4.4 V							

#### Power source

Rechargeable battery	Lithium-ion battery (SLB-11A, 1,130 mAh)
----------------------	--

The power source may differ depending on your region.

#### Dimensions (W x H x D)

99.5 x 59 x 21.7 mm

#### Weight

153.3 g (without battery and memory card)

#### Operating temperature

0 - 40° C

#### Operating humidity

5 - 85 %

#### Software

Intelli-studio, Samsung RAW Converter

Specifications are subject to change without prior notice.

# FCC notice

- **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate, or relocate, the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

- **CAUTION:**

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- **Declaration of Conformity**

Trade Name	: Samsung Electronics America, Inc.
Model No.	: Samsung TL350
Responsible Party	: Samsung Electronics America, Inc.
Address	: 105 Challenger Road Ridgefield Park NJ
Telephone No.	: 1-800-SAMSUNG (726-7864)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



PlanetFirst represents Samsung Electronics' commitment to the sustainable development and social responsibility through eco-driven business and management activities.

# Index

---

## A

Action Panorama mode 39

### Adjusting

Brightness 93

Contrast

in Playback mode 93

in Shooting mode 77

Saturation

in Playback mode 93

in Shooting mode 77

Sharpness 77

AF Lamp 113

AF Sound 110

Anynet+ 113

Aperture Priority mode 43

Aperture value 42

## B

### Battery

Charging 118

Life 118

Specifications 117

Battery gauge 20

Beauty Shot mode 40

Blink detection 68

### Burst

Bracket 58

Interval 57

Precapture 56

## C

Camera shake 32

Capturing an image from  
a video 88

### Cleaning

Body 115

Display 115

Lens 115

## D

Date and time 112

Deleting files 84

Digital Image Stabilization 45

Digital zoom 29

Disconnecting the  
device 101

Display brightness 110

Display type 26

DPOF 94

Dual IS mode 45

## E

Editing 90

Enlarging 85

Error messages 114

Exposure 71

## F

### Face detection

Blink Detection 68

Normal 66

Self-portrait 67

Smart Face Recognition 68

Smile Shot 67

Facial brightness 40

Facial imperfections 40

### Flash

Auto 59

Fill in 60

Off 59

Red-eye 60

Red-eye Fix 60

Slow Sync 60

### Focus area

Center AF 65

Multi AF 65

Selection AF 65

Tracking AF 64

### Focus distance

Auto Macro 62

Macro 62

Manual Focus 62

Normal (AF) 62

Format 111

Function button 16

Function description 110

**G**

Grid lines 110

**H**

Half-pressing 7

HDMI Size 113

HDTV 96

High-speed video

Playing 87

Recording 48

Histogram 26

**I**

Icons 23

Image adjust

add noise 93

brightness 93

contrast 93

face retouch 93

red-eye fix 93

saturation 93

Imprint 112

Intelli-studio 99

ISO speed 61

**L**

Light source

(White balance) 72

**M**

Macro 62

Maintenance 115

Manual mode 44

Memory card

Capacity 116

SD 116

SDHC 116

MENU button 16

Metering

Center-weighted 71

Multi 71

Spot 71

Mini dashboard 20

Mode dial 17

Movie mode 46

Muting

Camera 19

Video 46

My Star

Canceling faces 82

Ranking 81

Registering faces 69

**N**

Navigation button 16

**O**

Optical Image Stabilization  
(OIS) 30, 45

**P**

Photo quality 53

Photo styles

in Playback mode 91

in Shooting mode 75

Playback button 19

Playback mode 80

Printing photos 107

Print order 94

Program mode 41

Protecting files 84

**Q**

Quick View 111

**R**

RAW files 53

Recording

Video 46

Voice memo 50

Red-eye

in Playback mode 93

in Shooting mode 59

Reset 111

Resizing 90

**Resolution**

- Photo 52
- Video 52

**RGB tone**

- in Playback mode 91
- in Shooting mode 75

**Rotating 90****S****Samsung RAW  
Converter 103****Scene mode 37****Self-portrait 67****Service center 121****Settings**

- Accessing 109
- Camera 111
- Display 110
- Sound 110

**Shooting mode**

- Aperture Priority 43
- Dual IS 45
- Manual 44

## Movie 46

## Program 41

## Scene 37

## Shutter Priority 43

## Smart Auto 35

**Shutter Priority mode 43****Shutter speed 42****Slide show 86****Smart Album 82****Smart Auto mode 35****Smart Face Recognition 68****Smart filter effects**

- in Playback mode 92
- in Shooting mode 76

**Smart Range 78****Smart Scene Detection  
mode 49****Smile shot 67****Start image 110****T****Timer 54****Tracking focus 64****Transferring files**

- for Mac 102
- for Windows 97

**V****Video**

- Capturing still images from a video 47
- Playing 86
- Recording 46
- Using bookmarks 87

**Video Out 112****Viewing files**

- as thumbnails 83
- by category 82
- on TV 95
- Slide show 86

**Voice memo**

- Playing 88
- Recording 50

**Volume 110****W****White Balance 72****Z****Zoom button 16****Zooming 29**



Please refer to the warranty that came with your product or visit our website <http://www.samsung.com/> for after-sales service or inquiries.

